

CDP-XE800

SERVICE MANUAL

AEP Model



Model Name Using Similar Mechanism	NEW
CD Mechanism Type	CDM36-14
Base Unit Type	BU-14
Optical Pick-up Type	KSS-213B/S-N

SPECIFICATIONS

Compact disc player

Laser	Semiconductor laser ($\lambda = 780 \text{ nm}$) Emission duration: continuous
Laser output	Max 44.6 μW^* * This output is the value measured at a distance of 200 mm from the objective lens surface on the Optical Pick-up block with 7 mm aperture.
Frequency response	2 Hz to 20 kHz $\pm 0.5 \text{ dB}$
Signal-to-noise ratio	More than 108 dB
Dynamic range	More than 99 dB
Harmonic distortion	Less than 0.0027%
Channel separation	More than 103 dB

Outputs

	Jack type	Maximum output level	Load impedance
LINE OUT	Phono jacks	2 V (at 50 kilohms)	Over 50 kilohms
DIGITAL OUT (OPTICAL)	Optical output connector	-18 dBm	Wave length: 660 nm
PHONES	Stereo phone jack	10 mW	32 ohms

General

Power requirements	220 V - 230 V AC, 50/60 Hz
Power consumption	14 W
Dimensions (approx.) (w/h/d)	430 x 107 x 295 mm (17 x 4 1/4 x 11 5/8 in.) incl. projecting parts
Mass (approx.)	3.6 kg (7 lbs 15 oz)

Supplied accessories

- Audio cord (2 phono plugs - 2 phono plugs) (1)
- Remote commander (remote) (1)
- Sony SUM-3 (NS) batteries (2)

Design and specifications are subject to change without notice.




COMPACT DISC PLAYER
SONY®




CAUTION

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

The laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

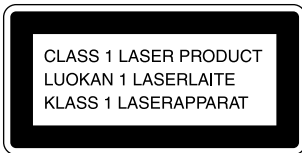

This appliance is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT MARKING is located on the rear exterior.

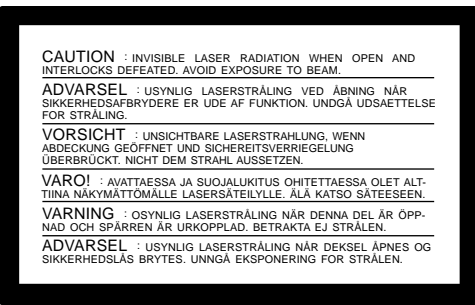

This caution label is located inside the unit.

Notes on chip component replacement

- Never reuse a disconnected chip component.
- Notice that the minus side of a tantalum capacitor may be damaged by heat.

Flexible Circuit Board Repairing

- Keep the temperature of soldering iron around 270°C during repairing.
- Do not touch the soldering iron on the same conductor of the circuit board (within 3 times).
- Be careful not to apply force on the conductor when soldering or unsoldering.

TABLE OF CONTENTS

<u>Section</u>	<u>Title</u>	<u>Page</u>
SECTION 1. SERVICING NOTE		3
SECTION 2. GENERAL		4
SECTION 3. DISASSEMBLY		
3-1.	Front Panel Assembly	5
SECTION 4. TEST MODE		6
SECTION 5. ELECTRICAL BLOCK CHECKING		8
SECTION 6. DIAGRAMS		
6-1.	Circuit Boards Location	10
6-2.	IC Pin Function	
	• IC801 System Control, Fluorescent Indicator Tube Drive (CXP82316-060Q) ..	11
6-3.	Printed Wiring Board — BD Section —	13
6-4.	Schematic Diagram — BD Section —	15
6-5.	Printed Wiring Board — Main Section —	20
6-6.	Schematic Diagram — Main Section —	23
SECTION 7. EXPLODED VIEWS		
7-1.	Front Panel Section	27
7-2.	Chassis Section	28
7-3.	CD Mechanism Section (CDM36-14)	29
7-4.	Base Unit Section (BU-14)	30
SECTION 8. ELECTRICAL PARTS LIST		31


SAFETY-RELATED COMPONENT WARNING !!

COMPONENTS IDENTIFIED BY MARK \triangle OR DOTTED LINE WITH MARK \triangle ON THE SCHEMATIC DIAGRAMS AND IN THE PARTS LIST ARE CRITICAL TO SAFE OPERATION. REPLACE THESE COMPONENTS WITH SONY PARTS WHOSE PART NUMBERS APPEAR AS SHOWN IN THIS MANUAL OR IN SUPPLEMENTS PUBLISHED BY SONY.

SECTION 1 SERVICING NOTE

HOW TO OPEN THE DISC TRAY WHEN POWER SWITCH TURNS OFF

*Insert a screwdriver into the aperture of the unit bottom, and
move it in the direction of arrow.*

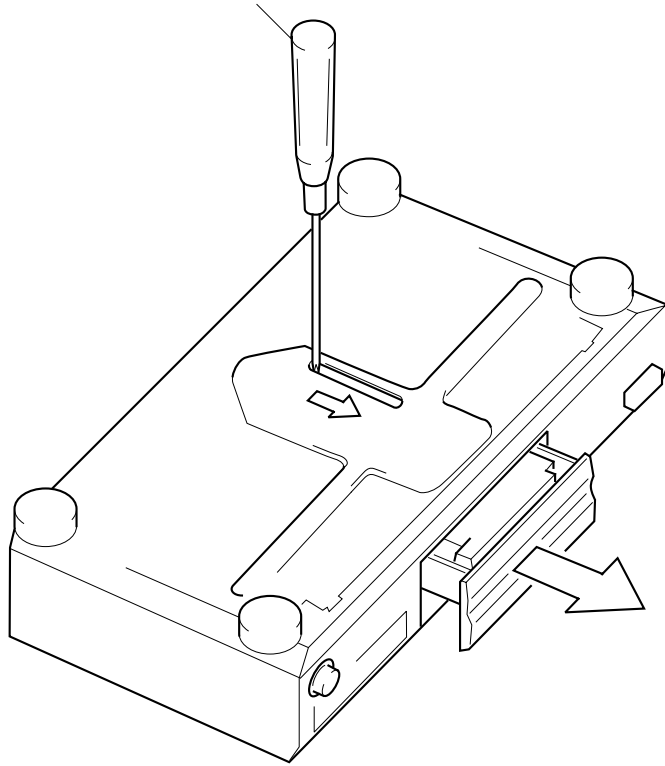

NOTES ON HANDLING THE OPTICAL PICK-UP BLOCK OR BASE UNIT

The laser diode in the optical pick-up block may suffer electrostatic breakdown because of the potential difference generated by the charged electrostatic load, etc. on clothing and the human body.

During repair, pay attention to electrostatic breakdown and also use the procedure in the printed matter which is included in the repair parts.

The flexible board is easily damaged and should be handled with care.

NOTES ON LASER DIODE EMISSION CHECK

The laser beam on this model is concentrated so as to be focused on the disc reflective surface by the objective lens in the optical pick-up block. Therefore, when checking the laser diode emission, observe from more than 30 cm away from the objective lens.


LASER DIODE AND FOCUS SEARCH OPERATION CHECK

Carry out the "S curve check" in "CD section adjustment" and check that the S curve waveform is output three times.

SECTION 2 GENERAL

Identifying the Parts

Front Panel

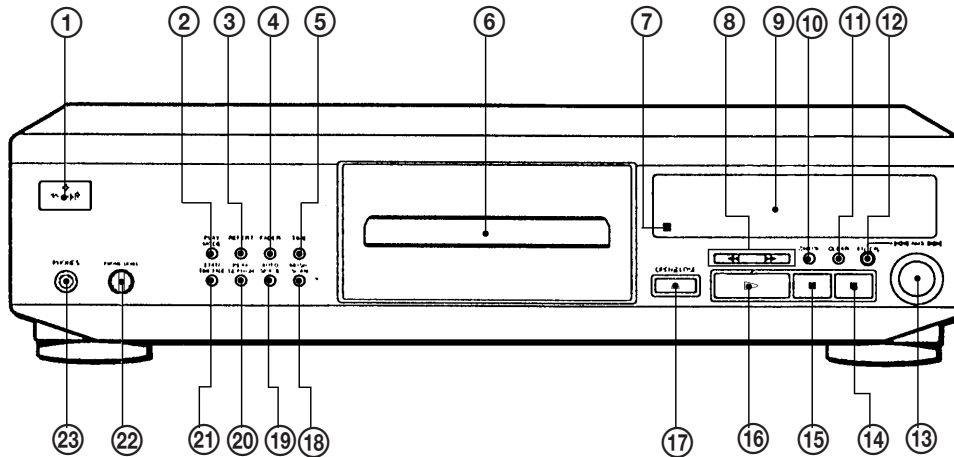

- ① POWER switch
- ② PLAY MODE button
- ③ REPEAT button
- ④ FADER button
- ⑤ TIME button
- ⑥ Disc tray
- ⑦ Remote sensor
- ⑧ ◀▶ buttons
- ⑨ Display window
- ⑩ CHECK button
- ⑪ CLEAR button
- ⑫ ENTER button
- ⑬ AMS* ± knob
- ⑭ ■ (stop) button
- ⑮ || (pause) button


- ⑯ ▷ (play) button
- ⑰ ≡ OPEN/CLOSE button
- ⑱ MUSIC SCAN button
- ⑲ AUTO SPACE button
- ⑳ PEAK SEARCH button
- ㉑ EDIT/TIME FADE button
- ㉒ PHONE LEVEL control
- ㉓ PHONES jack

* AMS is the abbreviation for Automatic Music Sensor.

SECTION 3 DISASSEMBLY

Note : Follow the disassembly procedure in the numerical order given.

3-1. FRONT PANEL ASSEMBLY

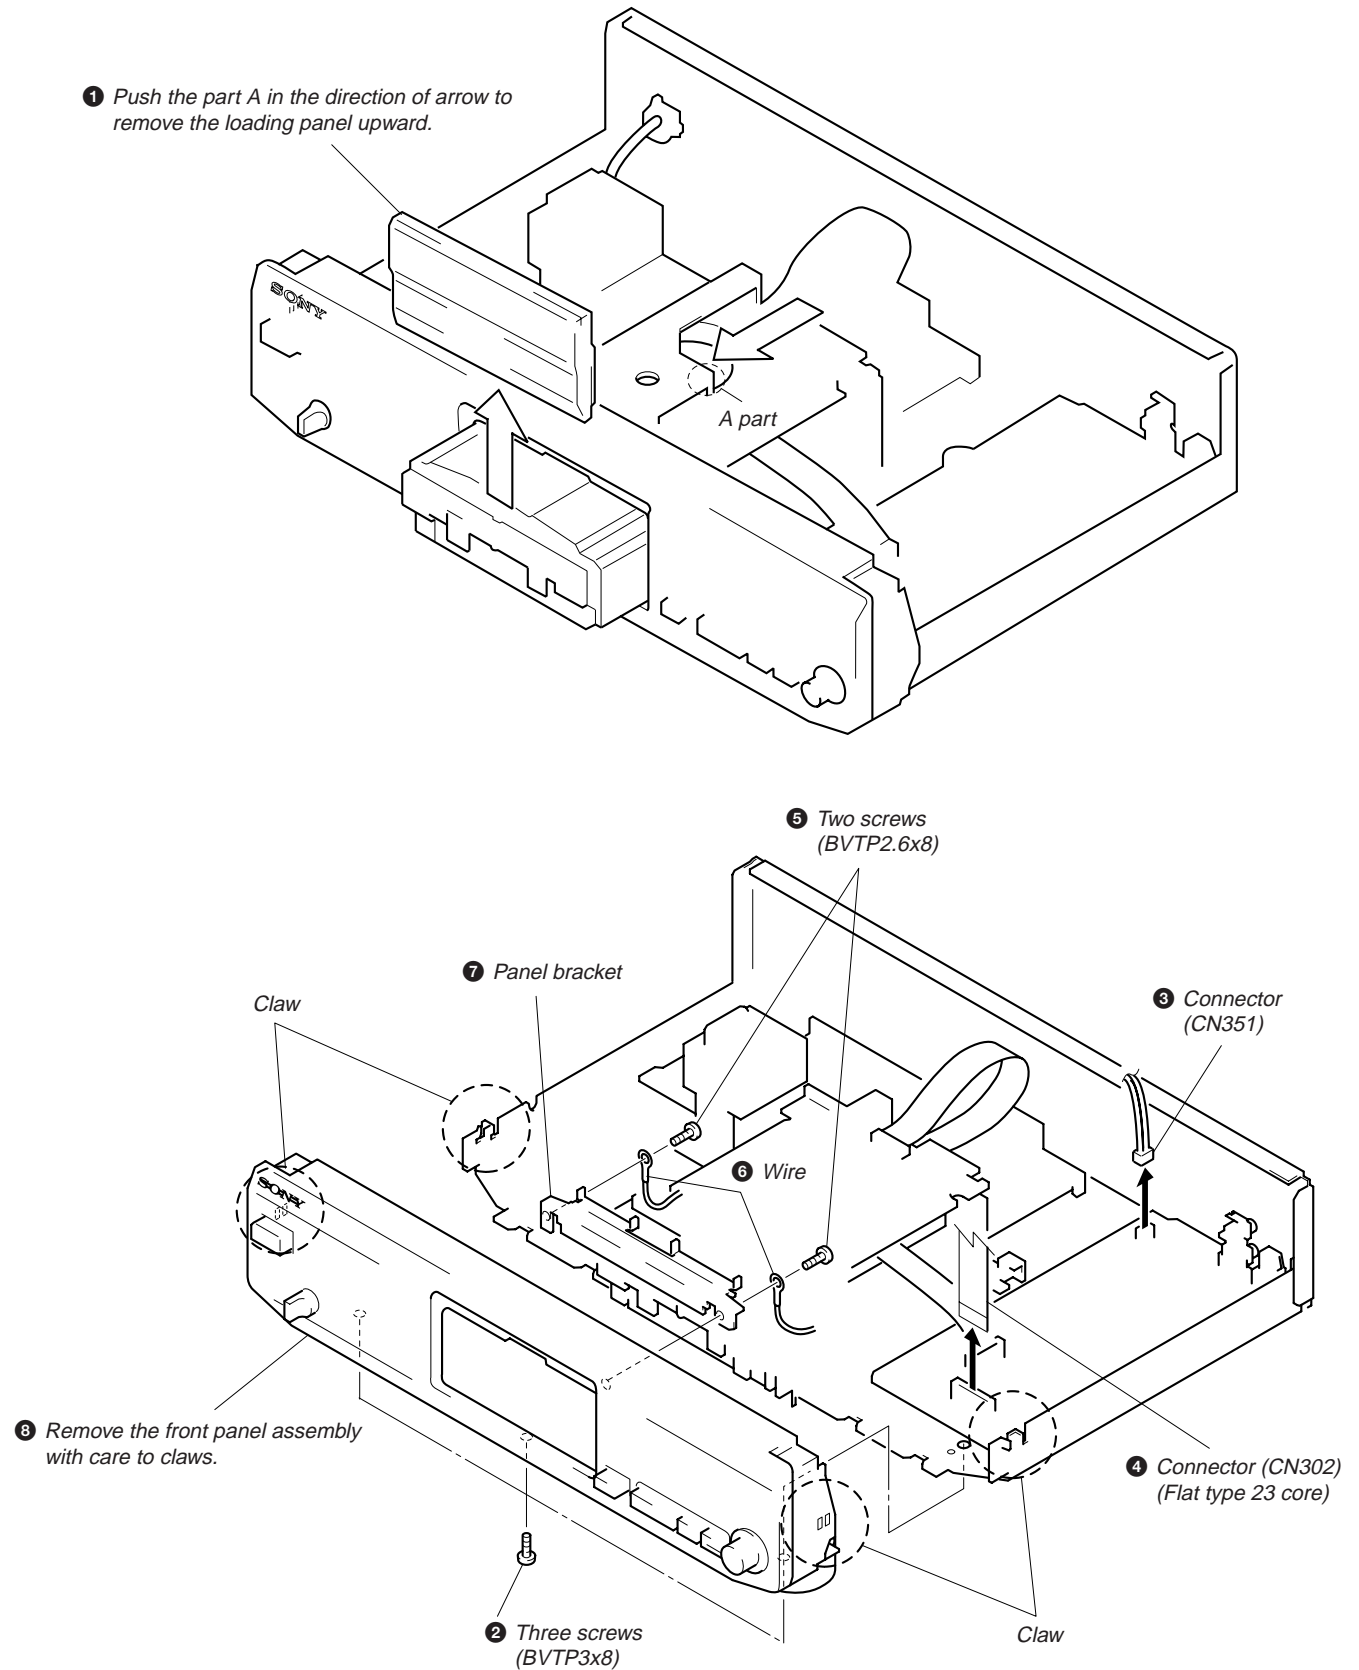

SECTION 4 TEST MODE

4-1. AF MODE

The following checks can be performed in the AF mode, which is set by connecting the TP2 (AFADJ : JW76) terminal on MAIN board to the Ground and turning on the power.

• FL tube check

After all segments light up, when the ▷ button is pressed, the following will be displayed. (Partial lighting 1)



When the ■ button is pressed, the following will be displayed. (partial lighting 2)

	2		4	
6		8		10
	12		14	
16		18		20

(Partial lighting 2)

When the OPEN/CLOSE ⇄ button is pressed, all will light up again.

When the ◀◀ AMS ▶▶ knob is turned right, the following will be displayed. (partial lighting 3)

1				

(Partial lighting 3)

• Key check

All buttons have corresponding button numbers. When a button is pressed, the counter will count up and display the button's number. However, the counter will only count to "17". It will not count for buttons already pressed once, but will display the button's number.



Button	Button No. Displayed	Button	Button No. Displayed
TIME	00	ENTER	32
FADER	01	CLEAR	33
REPEAT	02	CHECK	34
PLAY MODE	03	▶▶	35
EDIT/ TIME FADE	04	◀◀	36
PEAK SEARCH	05	OPEN/ CLOSE ⇄	All lit
AUTO SPACE	06	PLAY ▷	Partial lighting 1
MUSIC SCAN	07	STOP ■	Partial lighting 2
■	25	◀◀ AMS ▶▶	Partial lighting 3

• Remote commander check

When the ▷ button of the remote commander is pressed, the "▷" lights up. All go off when the other buttons are pressed.

• Audio check

- Initial setting of digital filter and release of mute.
- When the TP2 (AFADJ) terminal on MAIN board is set to HIGH (VDD), emphasis turns on. When set to LOW (GND), it turns off.

4-2. ADJ MODE

The following operations are performed in the ADJ mode, which is set by connecting the TP1 (ADJ : JW75) terminal to the Ground and turning on the power.

- During playback, there is no problem even if the GFS is continuously LOW.
- High speed search is prohibited during access.
- During playback, the gain of focus servo and spindle servo does not decrease.
- Servo related manual operations and measurement can be performed.
(For details of operations, refer to Table of Key Operations in ADJ Mode.)

4-3. CLV-S MODE

The spindle servo for playback sets into the CLV-S mode when the TP2 (AFADJ) terminal is connected to Ground after turning on the power.

TABLE OF BUTTON OPERATIONS IN ADJ MODE


The jitter value display mode can be set after the all-music remaining number mode using the TIME button.

The functions of the number buttons are shown in the following table.

FUNCTIONS OF NUMBER BUTTONS (With the attached remote commander)

Button	Function
1	Focus bias 8-step up
2	Middle of focus bias up/down turning point
3	Tracking servo, sled servo off
4	Auto gain initialization
5	Focus servo off
6	Focus bias 8-step down
7	Immediate readjustment of focus bias
8	Tracking servo, sled servo on
10	Auto focus bias start point

[MAIN BOARD] — Component Side —

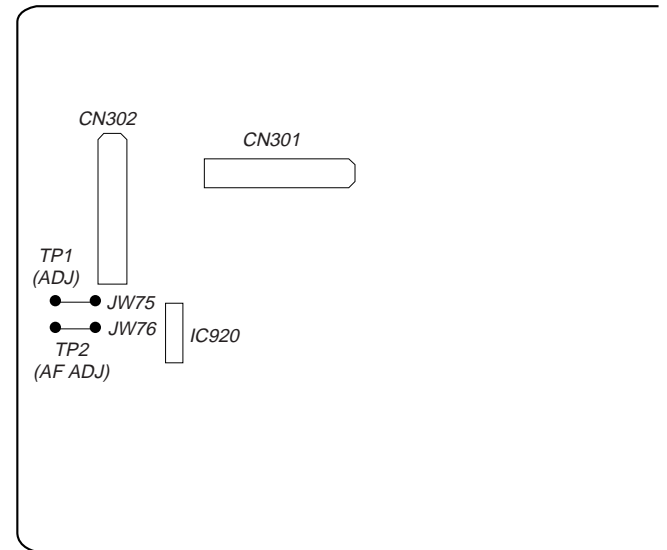


SECTION 5 ELECTRICAL BLOCK CHECKING

Note:

1. CD Block is basically designed to operate without adjustment. Therefore, check each item in order given.
2. Use YEDS-18 disc (3-702-101-01) unless otherwise indicated.
3. Use an oscilloscope with more than 10MΩ impedance.
4. Clean the object lens by an applicator with neutral detergent when the signal level is low than specified value with the following checks.


S Curve Check

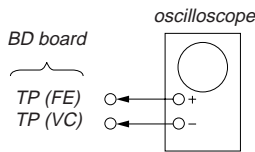

Procedure :


1. Connect oscilloscope to test point TP (FE) on BD board.
2. Connect between test point TP (FEI) and TP (VC) by lead wire.
3. Turned Power switch on.
4. Put disc (YEDS-18) in and turned Power switch on again and actuate the focus search. (actuate the focus search when disc table is moving in and out.)
5. Check the oscilloscope waveform (S-curve) is symmetrical between A and B. And confirm peak to peak level within 3 ± 1 Vp-p.

S-curve waveform

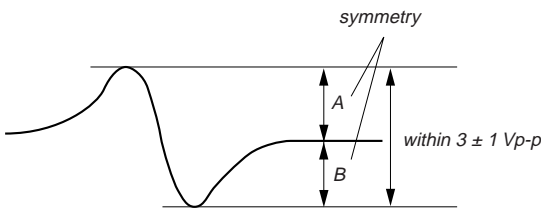

6. After check, remove the lead wire connected in step 2.
- Note :**
- Try to measure several times to make sure than the ratio of A : B or B : A is more than 10 : 7.
 - Take sweep time as long as possible and light up the brightness to obtain best waveform.

RF Level Check

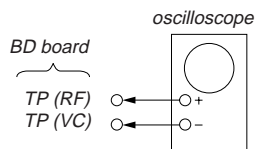


Procedure :


1. Connect oscilloscope to test point TP (RF) on BD board.
2. Turned Power switch on.
3. Put disc (YEDS-18) in to play the number five track.
4. Confirm that oscilloscope waveform is clear and check RF signal level is correct or not.

Note: A clear RF signal waveform means that the shape “∅” can be clearly distinguished at the center of the waveform.

RF signal waveform

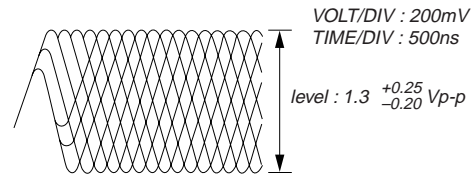


**E-F Balance (1 Track Jump) Check
(Without remote commander)**

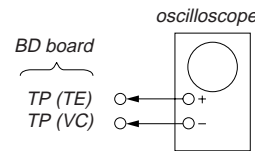


Procedure :

1. Connect oscilloscope to test point TP (TE) on BD board.
 2. Turned Power switch on.
 3. Put disc (YEDS-18) in to play the number five track.
 4. Press the “||| (Pause)” button. (Becomes the 1 track jump mode)
 5. Check the level B of the oscilloscope's waveform and the A (DC voltage) of the center of the Traverse waveform.
- Confirm the following :
- $A/B \times 100 = \text{less than } \pm 22\%$

1 track jump waveform

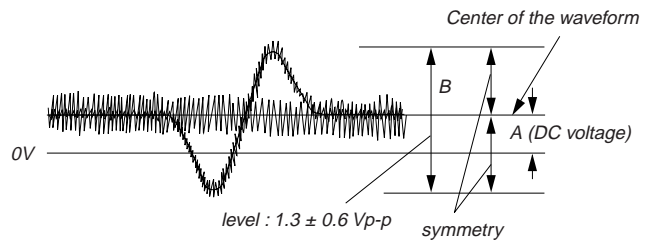


E-F Balance Check (With remote commander)

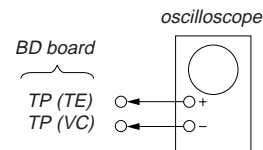


Procedure :

1. Connect the test point TP1 (ADJ : JW75) on MAIN board to the ground with a lead wire on main board.
2. Connect oscilloscope to test point TP (TE) on BD board.
3. Turn the Power switch on to set the ADJ mode.
4. Put disc (YEDS-18) in to play the number five track.
5. Press the “3” button. (The tracking servo and the sledding servo are turned OFF.)

- Check the level B of the oscilloscope's waveform and the A (DC voltage) of the center of the Traverse waveform.
Confirm the following :
 $A/B \times 100 = \text{less than } \pm 22\%$

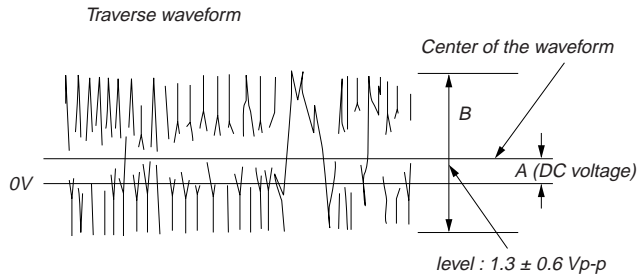

- Press the "8" button. (The tracking servo and sledding servo are turned ON.) Confirm the C (DC voltage) is almost equal to the A (DC voltage) is step 6.

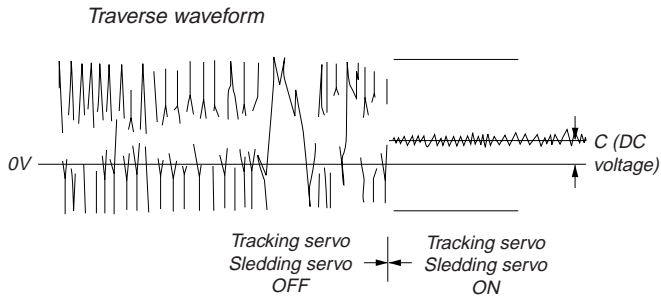


- Disconnect the lead wire of TP1 (ADJ : JW75) connected in step 1.

RF PLL Free-run Frequency Check

Procedure :


- Connect frequency counter to test point (XPLCK) with lead wire.

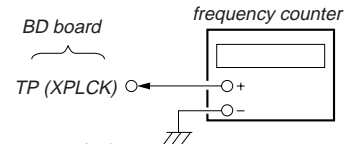


- Turned Power switch on.
- Put the disc (YEDS-18) in to play the number five track.
Confirm that reading on frequency counter is 4.3218MHz.

Adjustment Location :

[BD BOARD] — Side A —

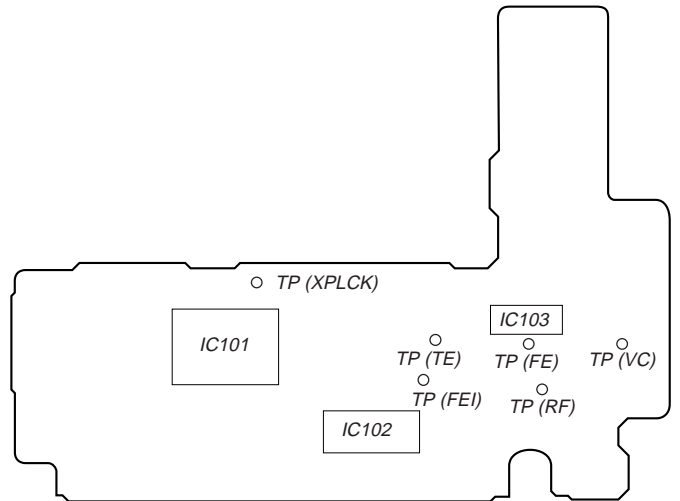


[MAIN BOARD] — Component Side —

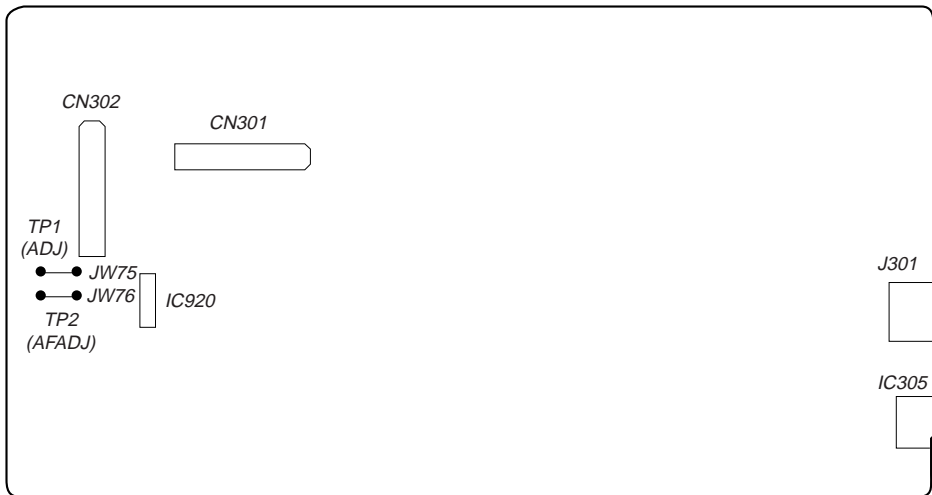

SECTION 6 DIAGRAMS

6-1. CIRCUIT BOARDS LOCATION

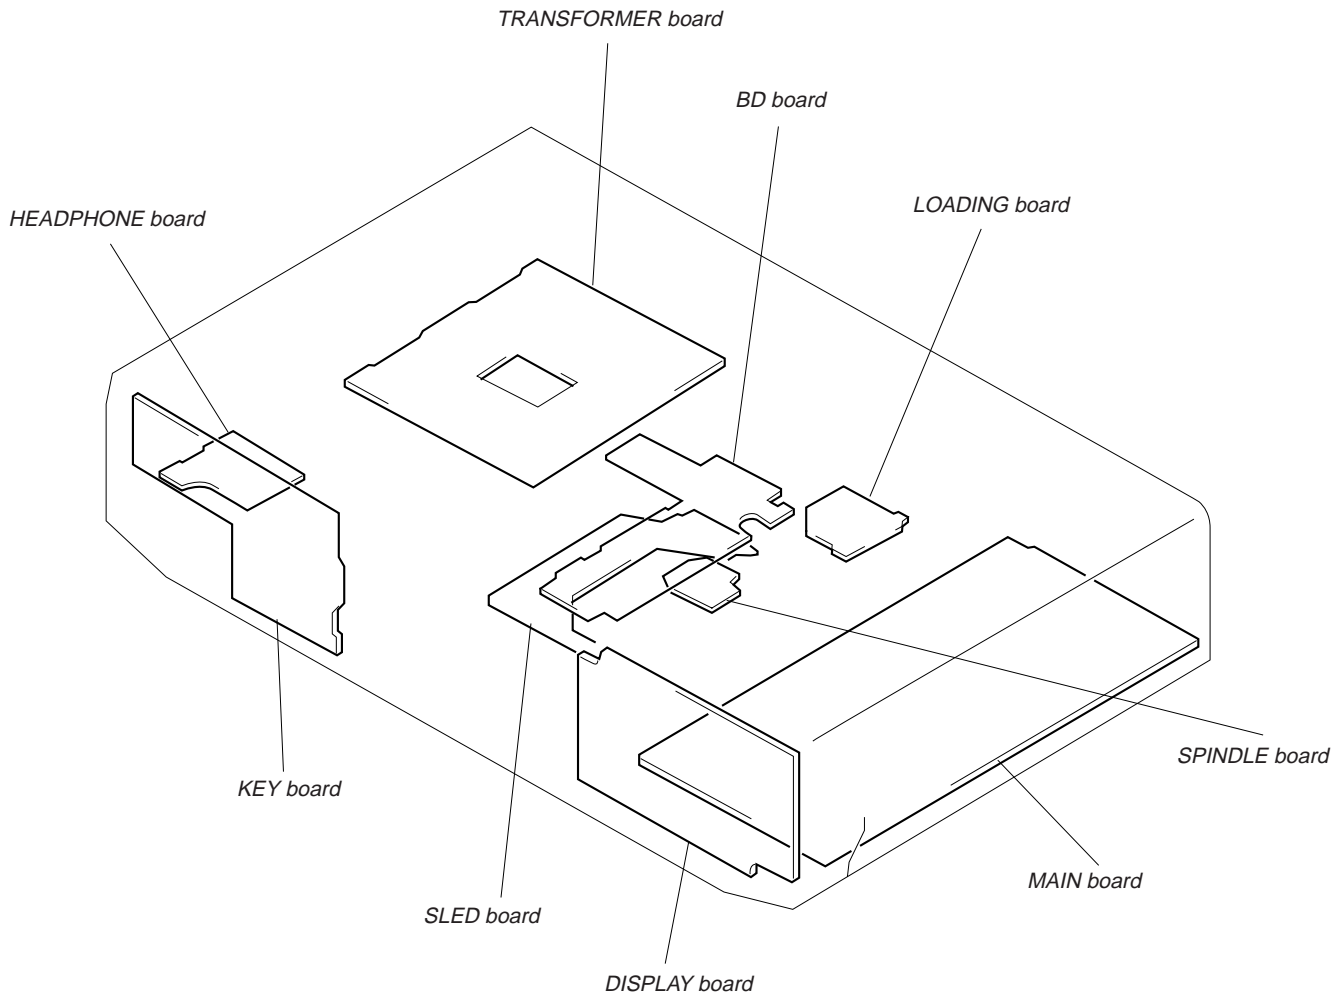


6-2. IC PIN FUNCTION

• IC801 SYSTEM CONTROL, FLUORESCENT INDICATOR TUBE DRIVE (CXP82316-060Q)



Pin No.	Pin Name	I/O	Function
1	TIMER	–	Connected to +5V.
2	RM (BUSIN)	I	Audio bus input.
3	+5V	–	Connected to +5V.
4	OPEN	–	Not used. (open)
5	OPEN	–	
6	(BUS-OUT)	–	
7	PRGL	O	Latch signal output to digital filter (IC303).
8	CLK	O	Serial clock output.
9	SENSE	I	SENSE signal input.
10	DATA	O	Serial data output.
11	SQCK	O	Read out clock output for subcode Q data.
12	SUBQ	I	Subcode Q data input.
13	OPEN	–	Not used. (open)
14	AMUTE	O	Analog muting control signal output.
15	LDON	O	Optical pickup laser diode control output.
16	XLT	O	Serial data latch signal output.
17	RVLED	–	Not used. (open)
18	RV+	O	Remote commander volume +. (Not used)
19	RV–	O	Remote commander volume –. (Not used)
20	LDOUT	O	Loading motor control signal output.
21	LDIN	O	
22 to 27	KEY0 to KEY5	I	Key input. (S801 to S810, S820 to S826, S828)
28	ADJ/AFADJ	–	ADJ, AFADJ test pin.
29	IN/OUTSW	I	Loading IN/OUT switch input.
30	RST	I	Reset signal input.
31	EXTAL	I	Clock input. (4 MHz)
32	XTAL	O	Clock output. (4 MHz)
33	V _{SS}	–	Ground
34 to 41	OPEN	–	Not used. (open)
42 to 62	S1 to S21	O	Fluorescent Indicator Tube segment output.
63 to 70	1G to 8G	O	Fluorescent Indicator Tube grid output.
71	VFDP (–30V)	–	–30V pin for Fluorescent Indicator tube.
72	V _{DD} (+5V)	–	+5V pin.
73	—	–	
74	SEL1	–	Connected to Ground.
75	IN PORT	–	Connected to +5V.
76	IN PORT	–	
77	IN PORT	–	
78	SCOR	I	Read out timing signal input for subcode Q data.
79	SEL2	–	Connected to Ground.
80	SEL3	–	Connected to +5V.

• IC Block Diagrams

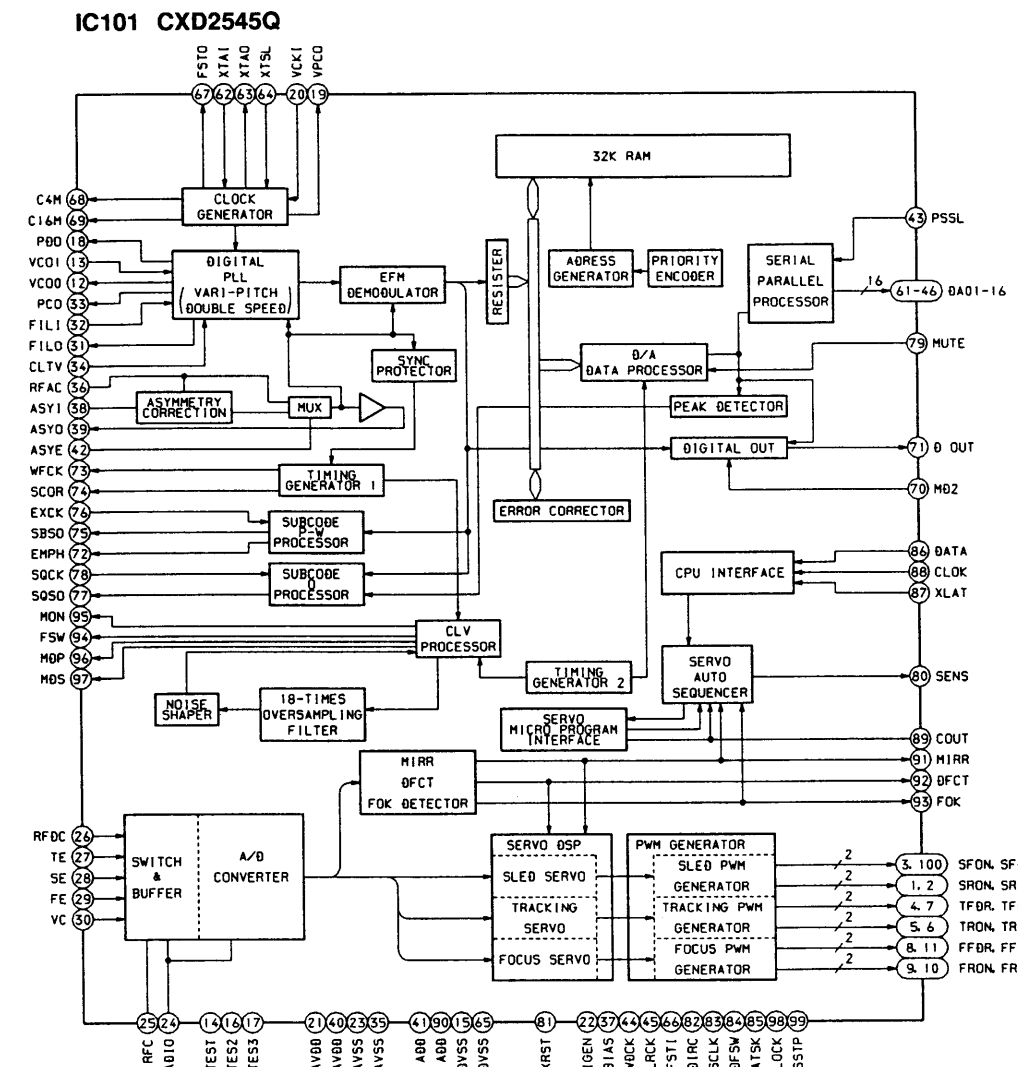


• Semiconductor Location

Ref. No.	Location
D101	E-1
IC101	D-3
IC102	E-4
IC103	D-6
Q101	D-7
Q102	D-7

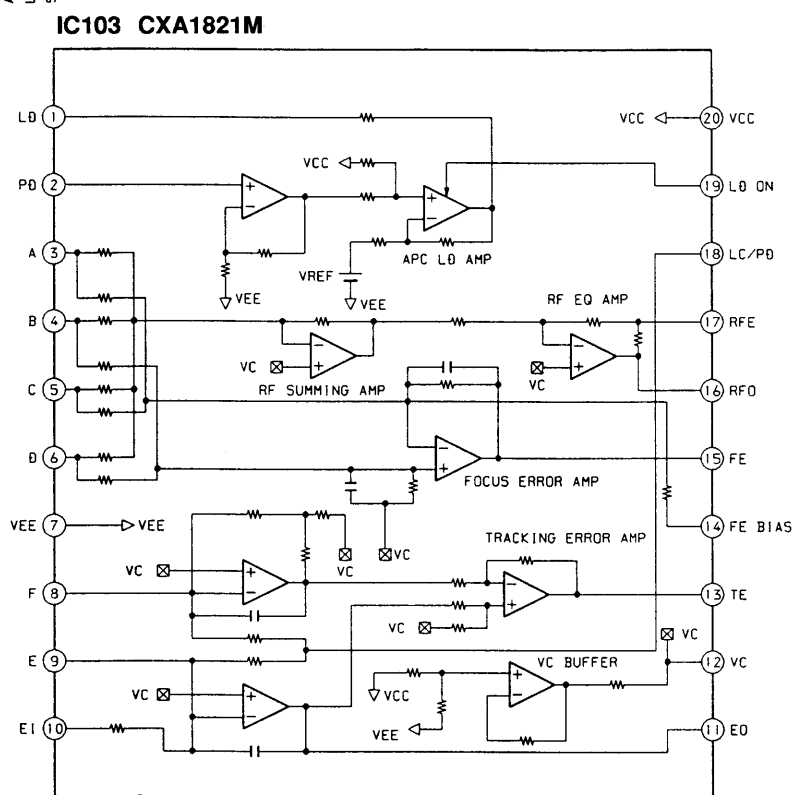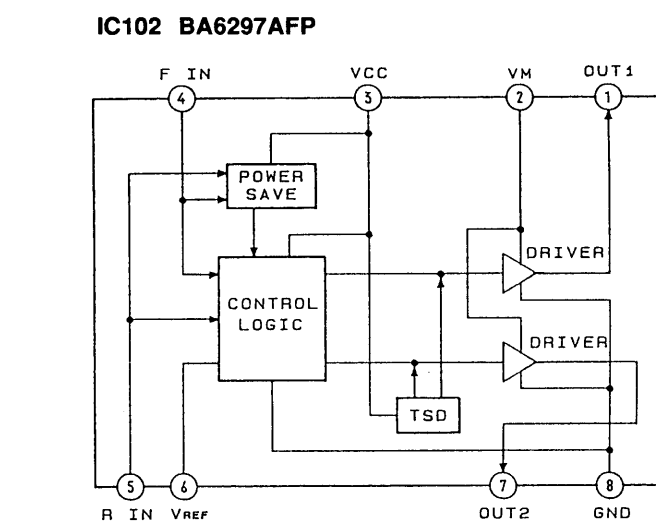


6-3. PRINTED WIRING BOARD — BD SECTION —
• See page 10 for Circuit Boards Location.

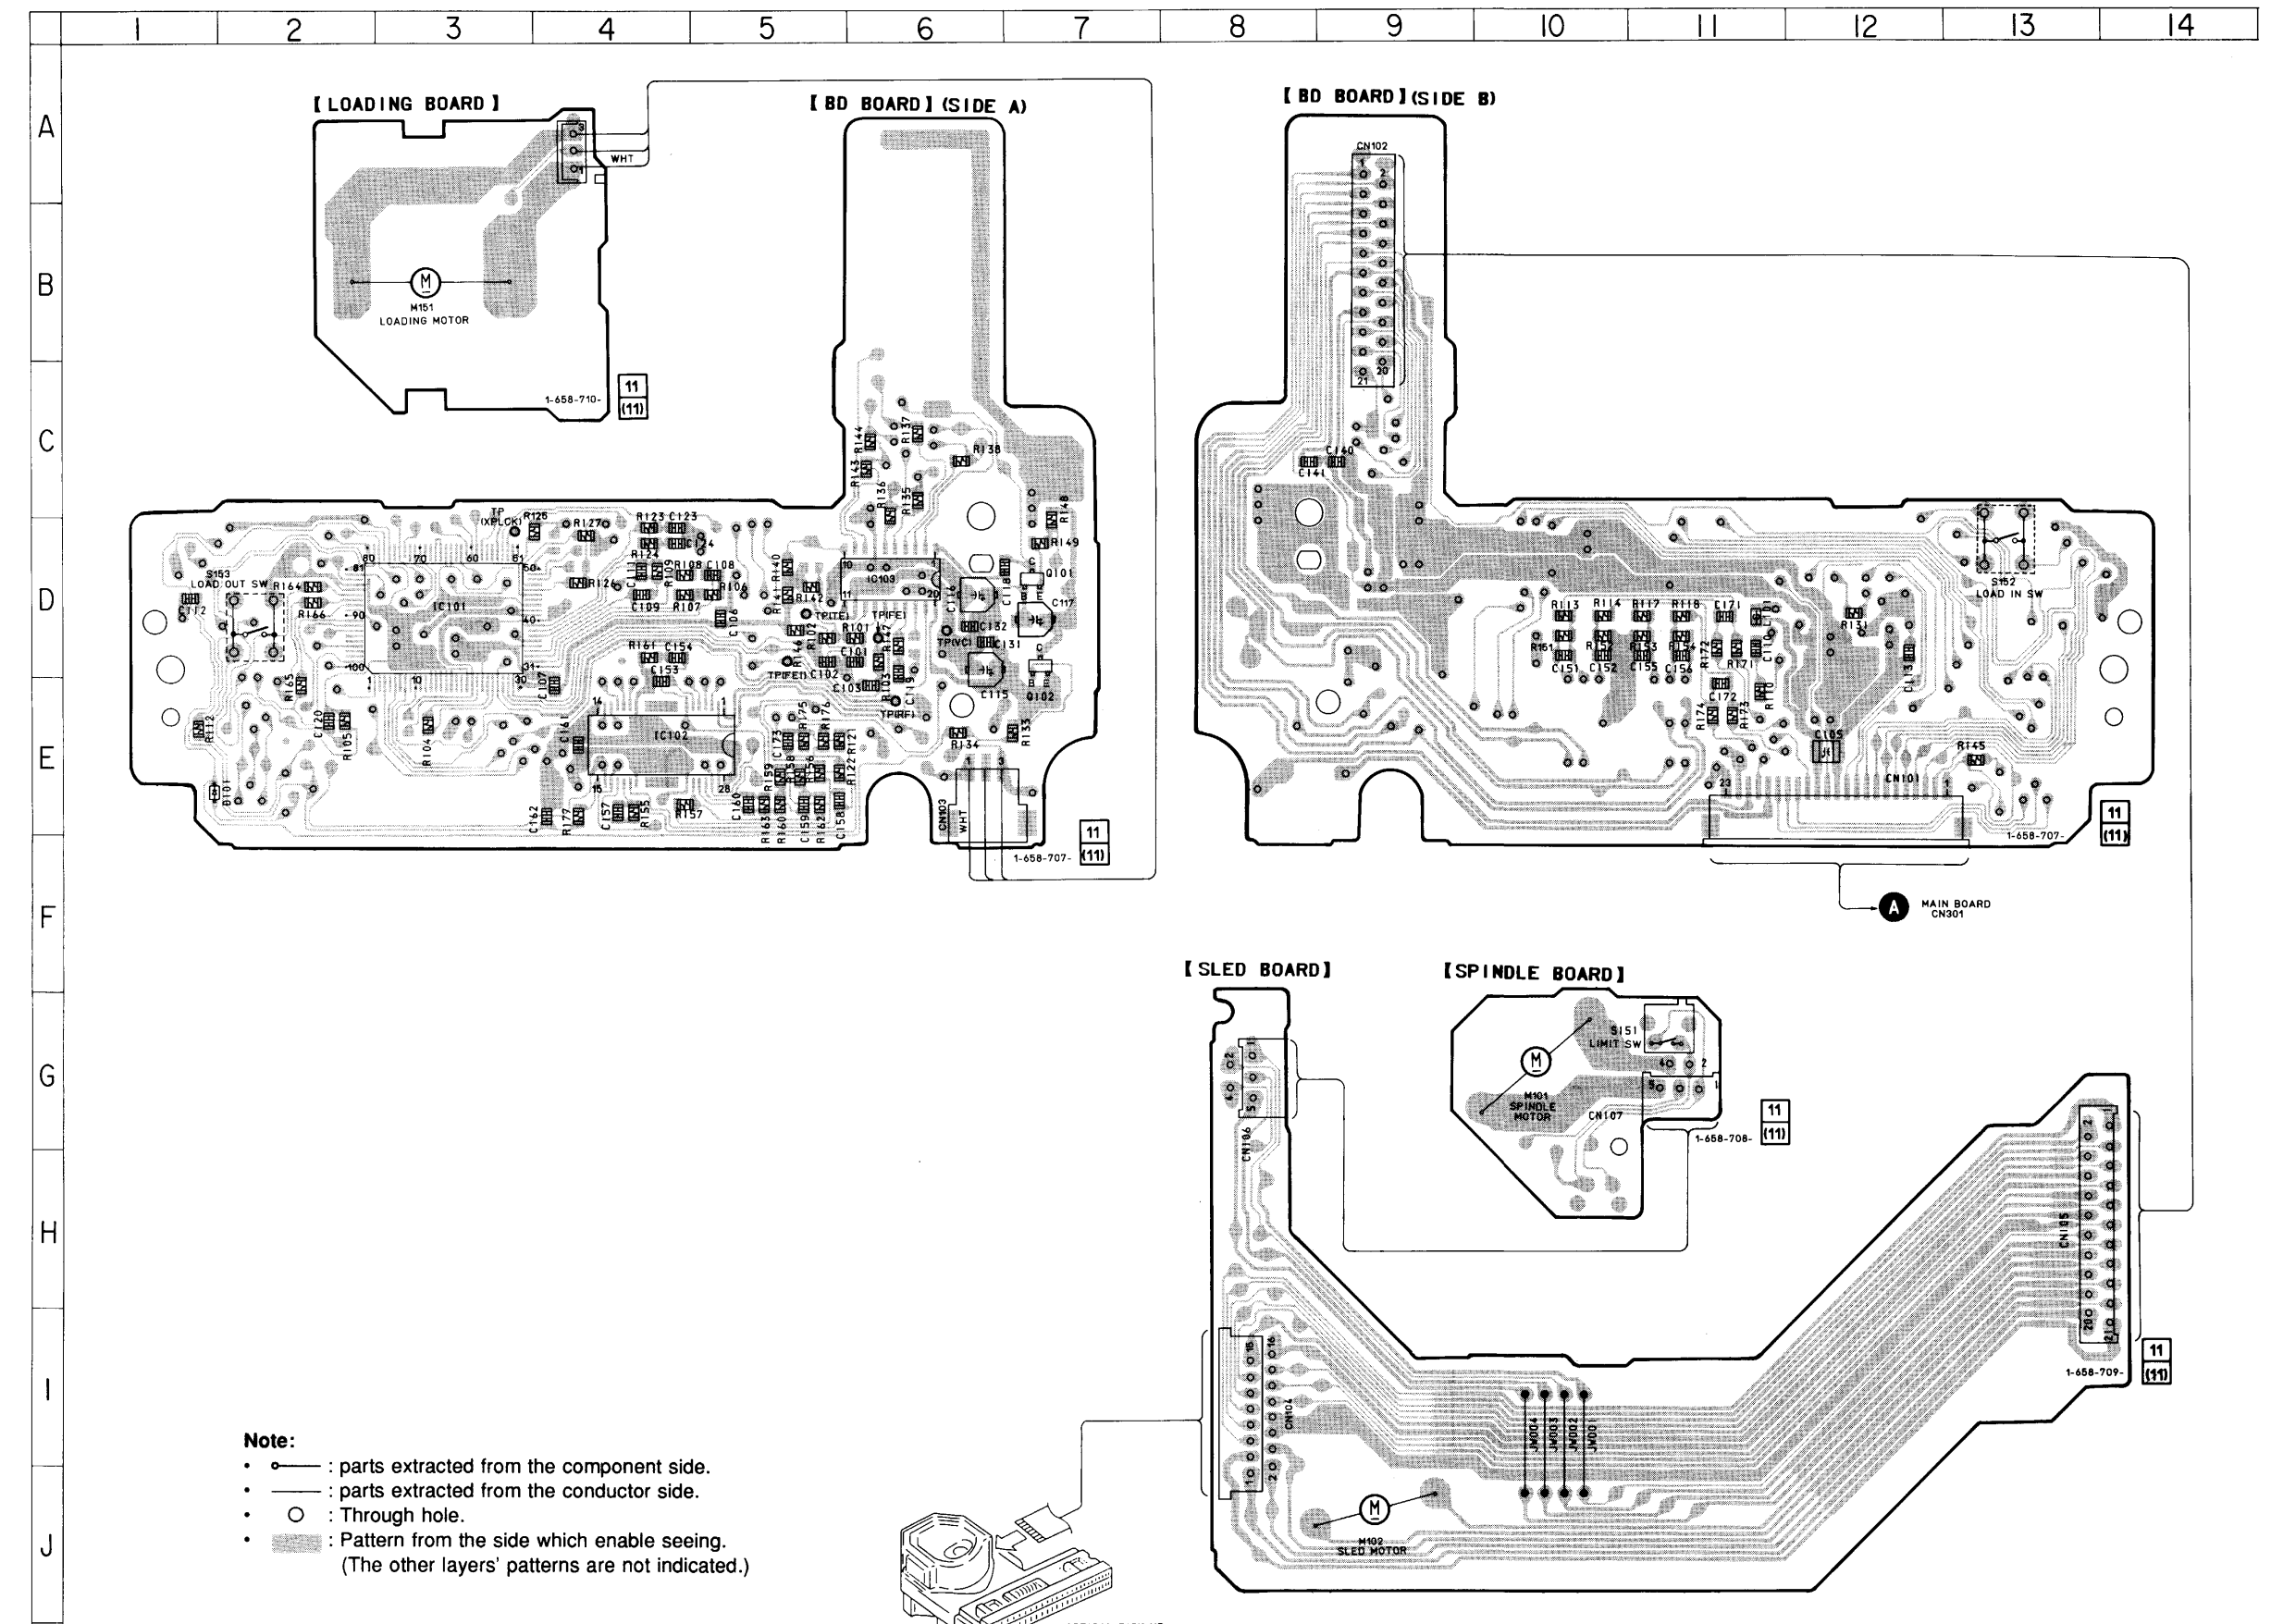


Note:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- : Through hole.
- : Pattern from the side which enable seeing. (The other layers' patterns are not indicated.)

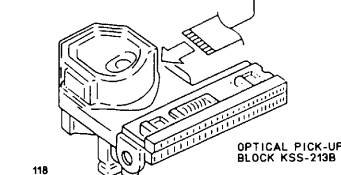

6-4. SCHEMATIC DIAGRAM — BD SECTION —

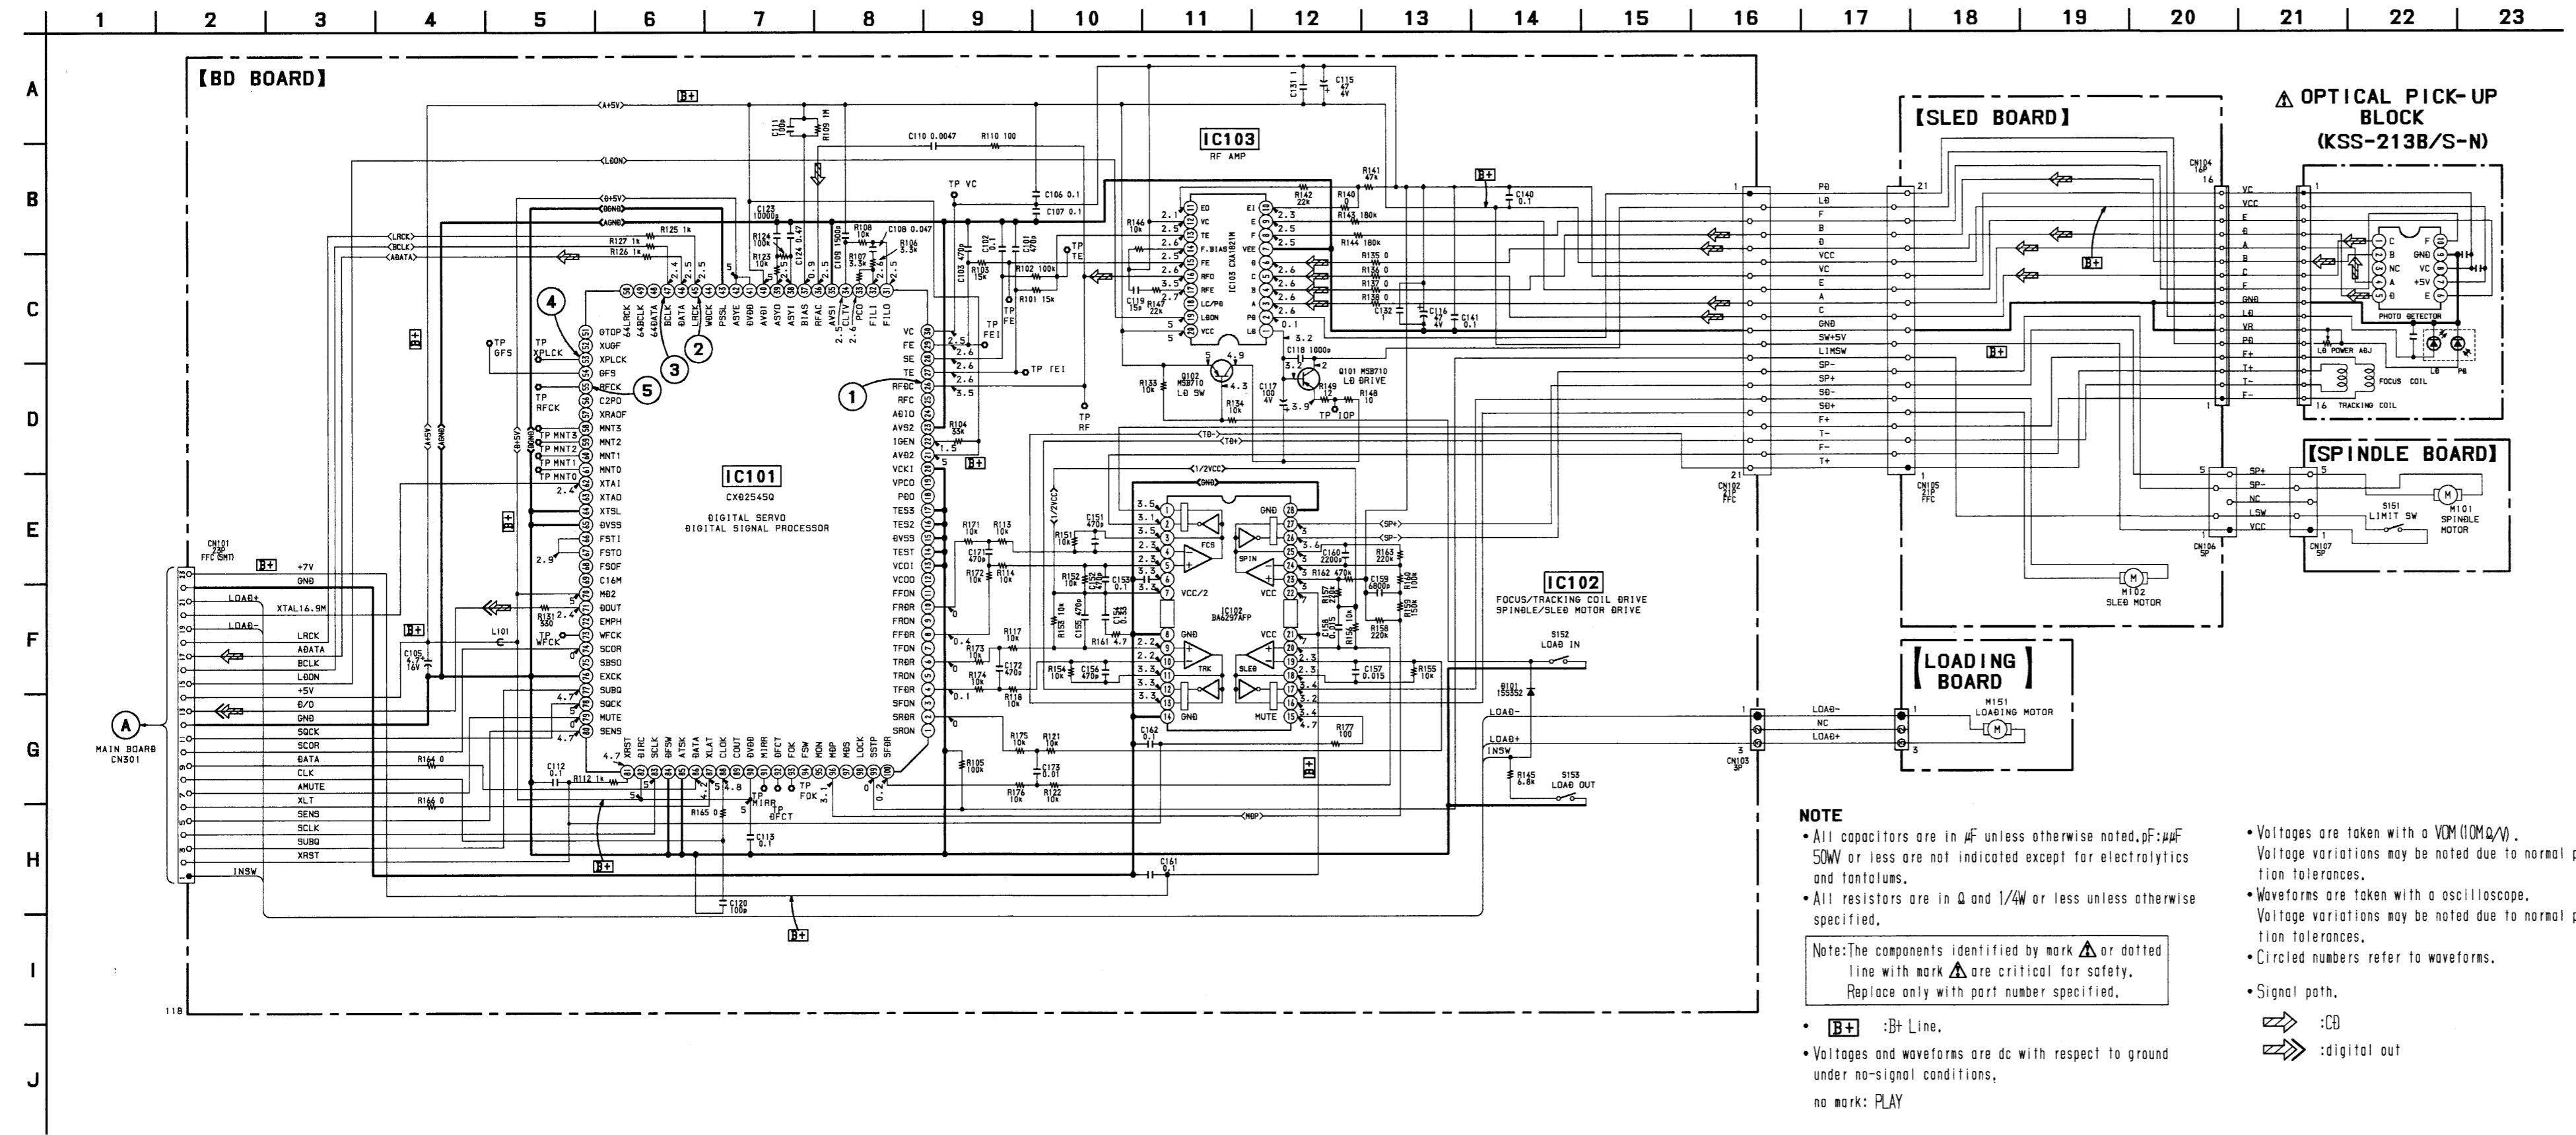


NOTE

- All capacitors are in μF unless otherwise noted, pF: μF 50W or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.
- $\text{B}+$: B+ Line.
- Voltages and waveforms are dc with respect to ground under no-signal conditions, no mark: PLAY




- Voltages are taken with a VOM (10M Ω/V). Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope. Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.

- \Rightarrow : CB
- \Rightarrow : digital out

Waveforms

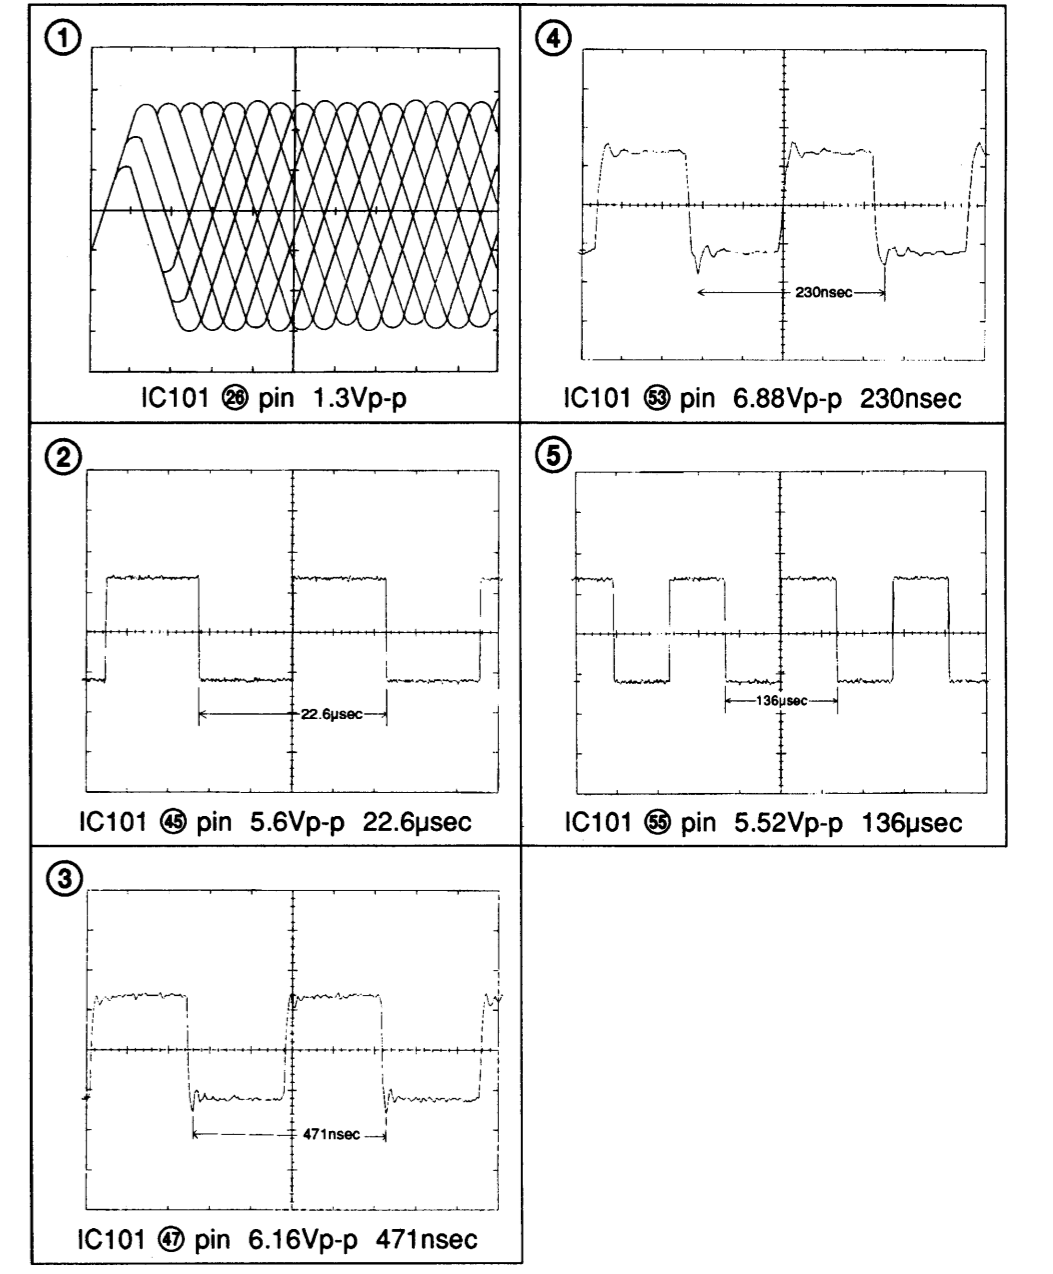

• IC Block Diagrams

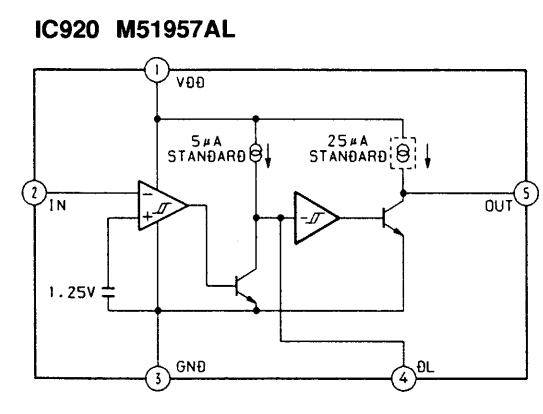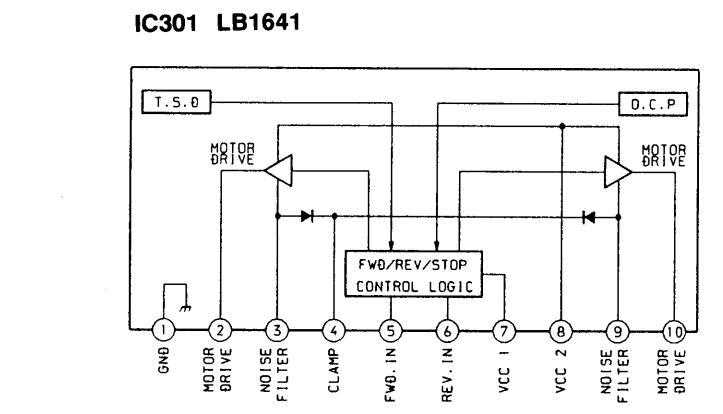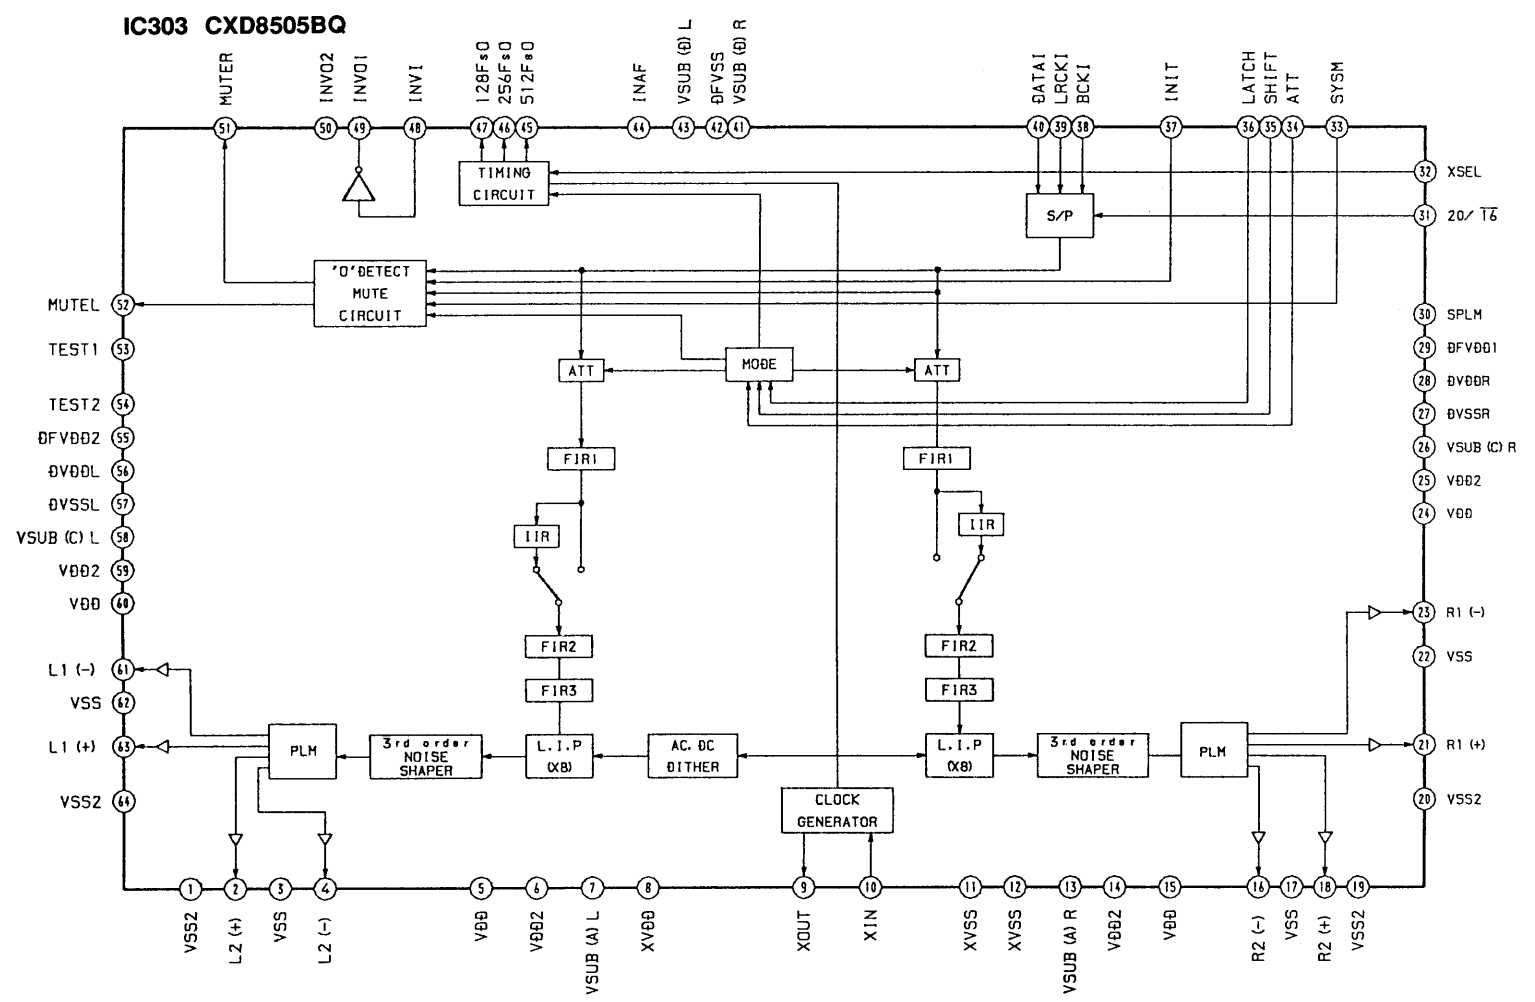


• Semiconductor Location

Ref. No.	Location
D301	J-3
D302	G-4
D303	J-9
D910	J-6
D911	I-5
D912	I-5
D913	I-4
D930	I-8
D931	I-8
D932	I-7
D933	I-7
D934	I-9
D935	I-9
D936	H-6
D937	H-6
IC301	J-3
IC303	G-6
IC304	I-10
IC305	F-11
IC401	G-9
IC501	H-9
IC801	B-3
IC802	B-7
IC920	G-3
IC930	H-8
IC931	H-6
Q301	J-9
Q401	G-10
Q403	F-10
Q404	F-3
Q501	H-10
Q503	H-10
Q504	F-3
Q801	C-6
Q910	J-5
Q911	I-5
Q920	H-3
Q930	H-7
Q931	H-6
Q932	J-6
Q933	H-5
Q934	I-6


Note:

- : parts extracted from the component side.
- : parts extracted from the conductor side.
- ▨ : Pattern from the side which enable seeing.

6-5. PRINTED WIRING BOARD — MAIN SECTION —
• See page 10 for Circuit Boards Location.

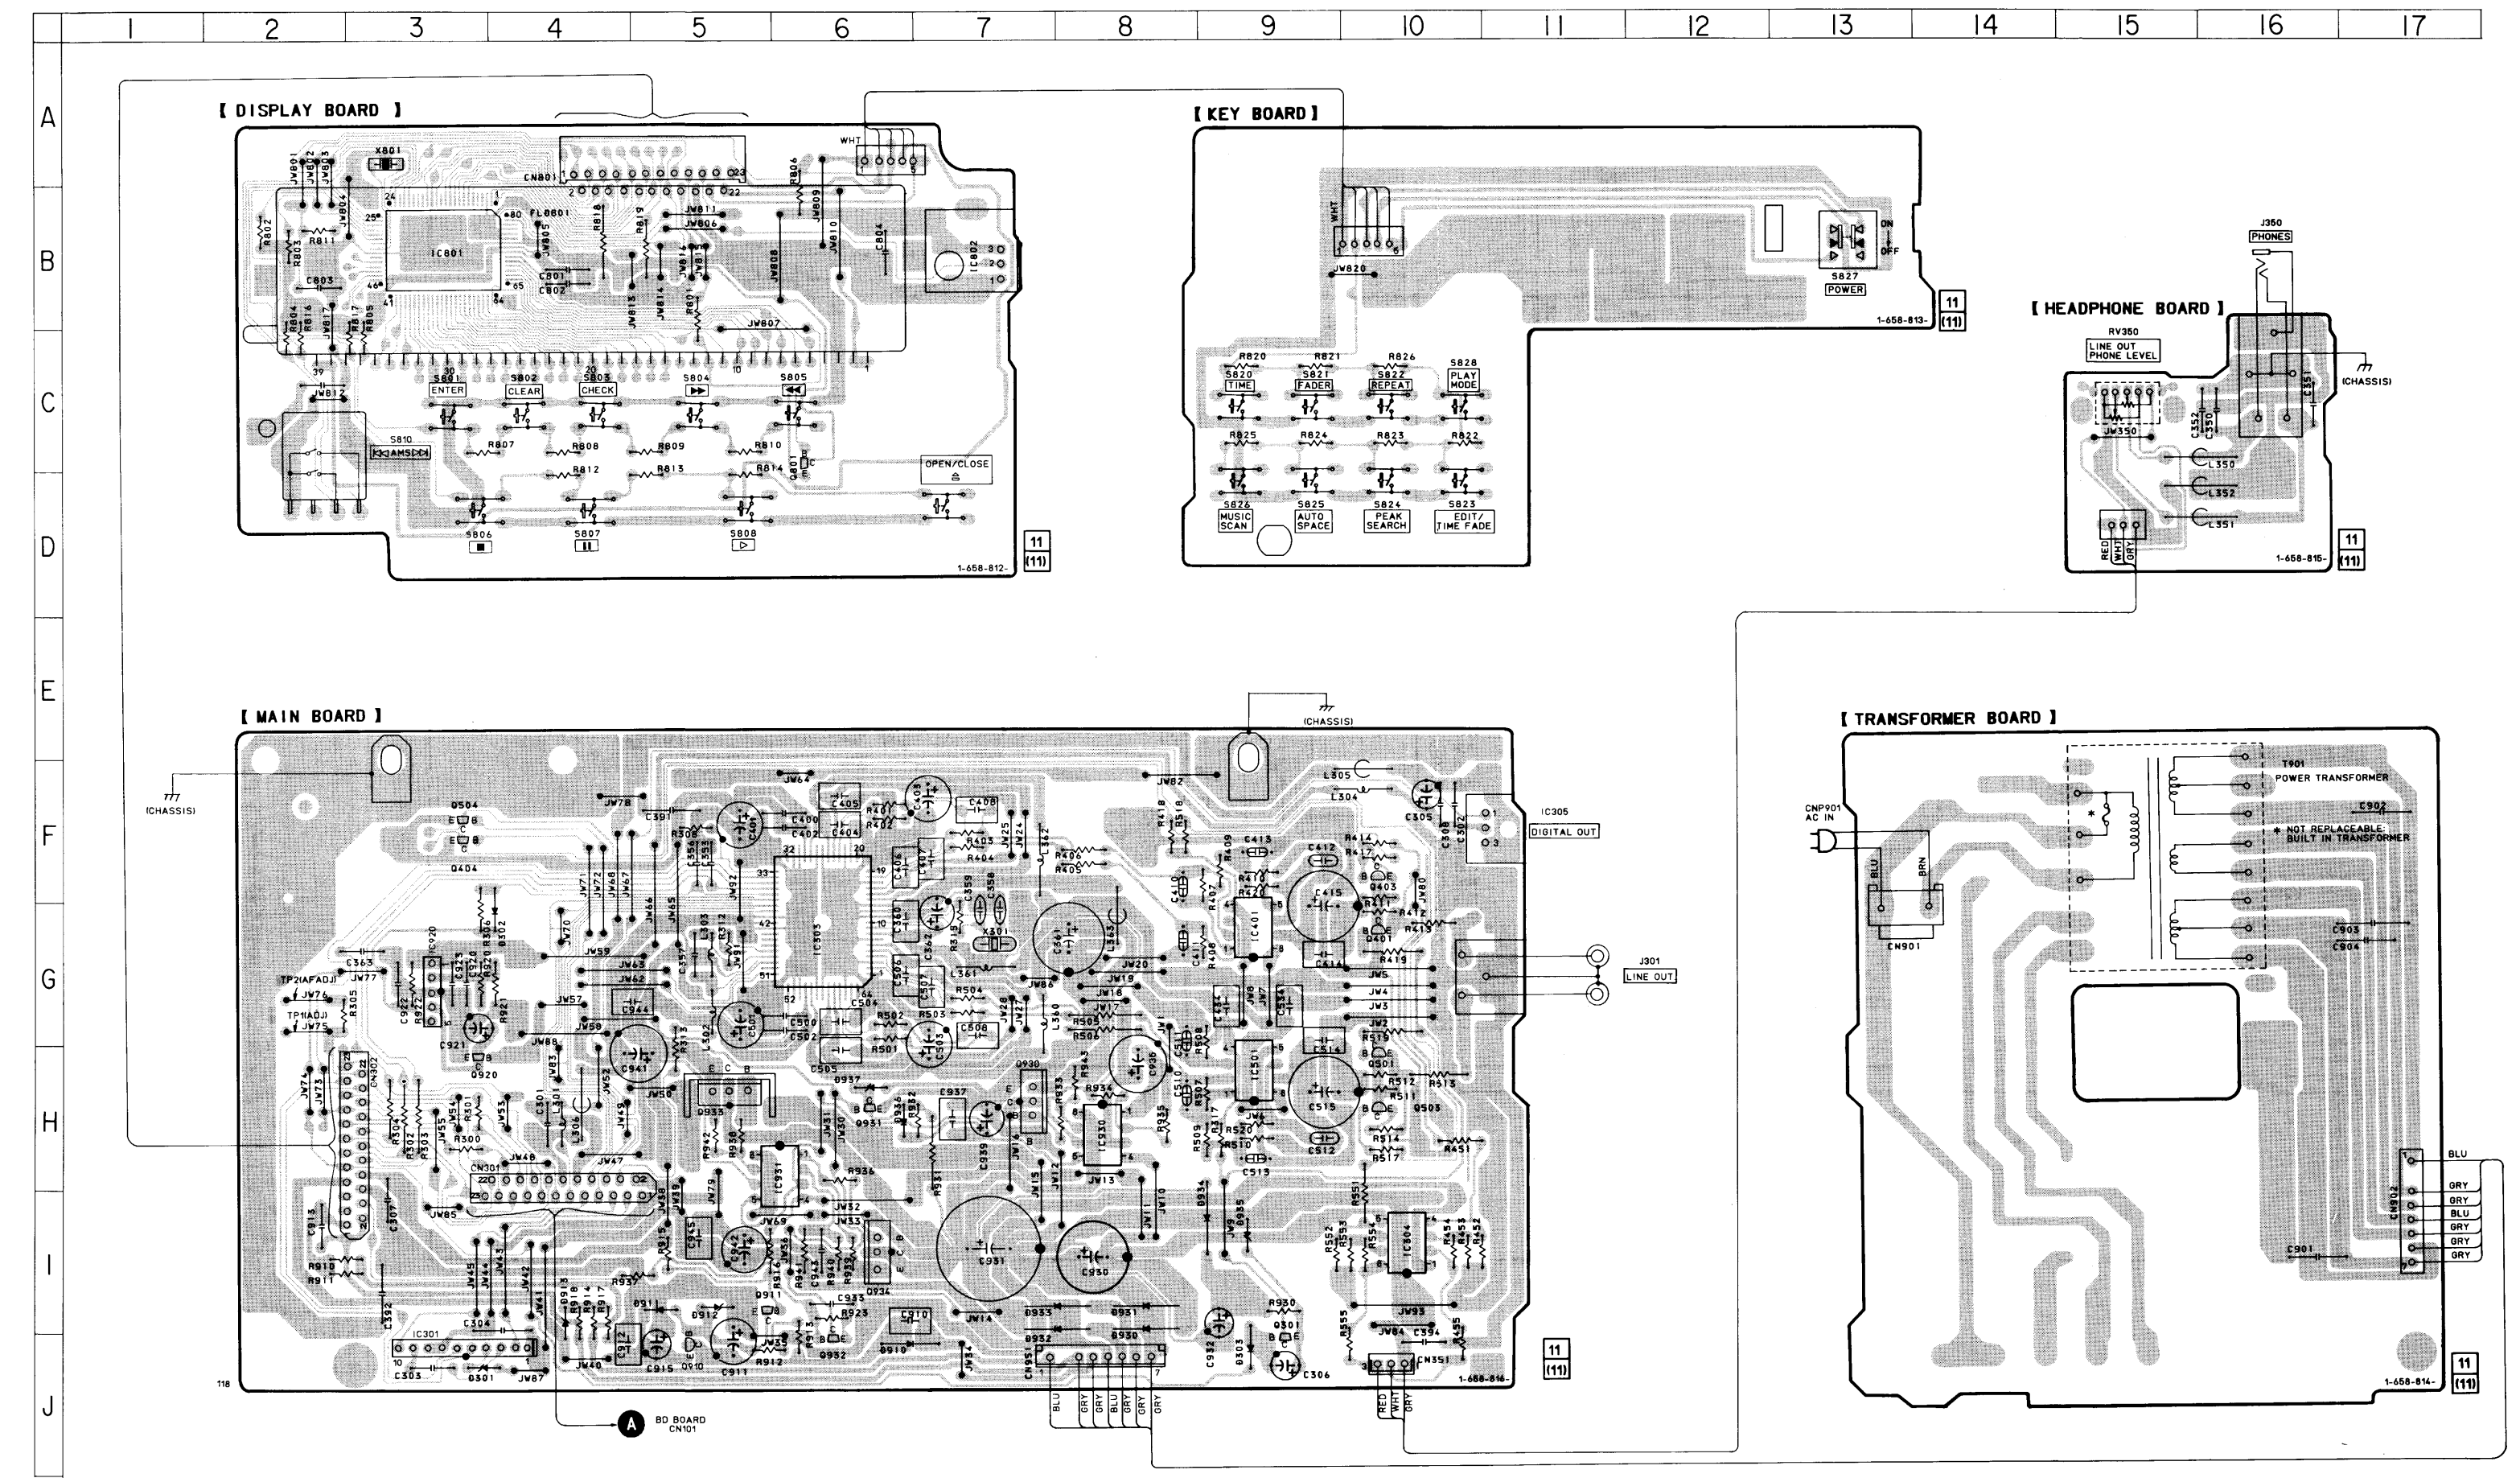

6-6. SCHEMATIC DIAGRAM — MAIN SECTION —
• See page 11 for IC Pin Function. (IC801)



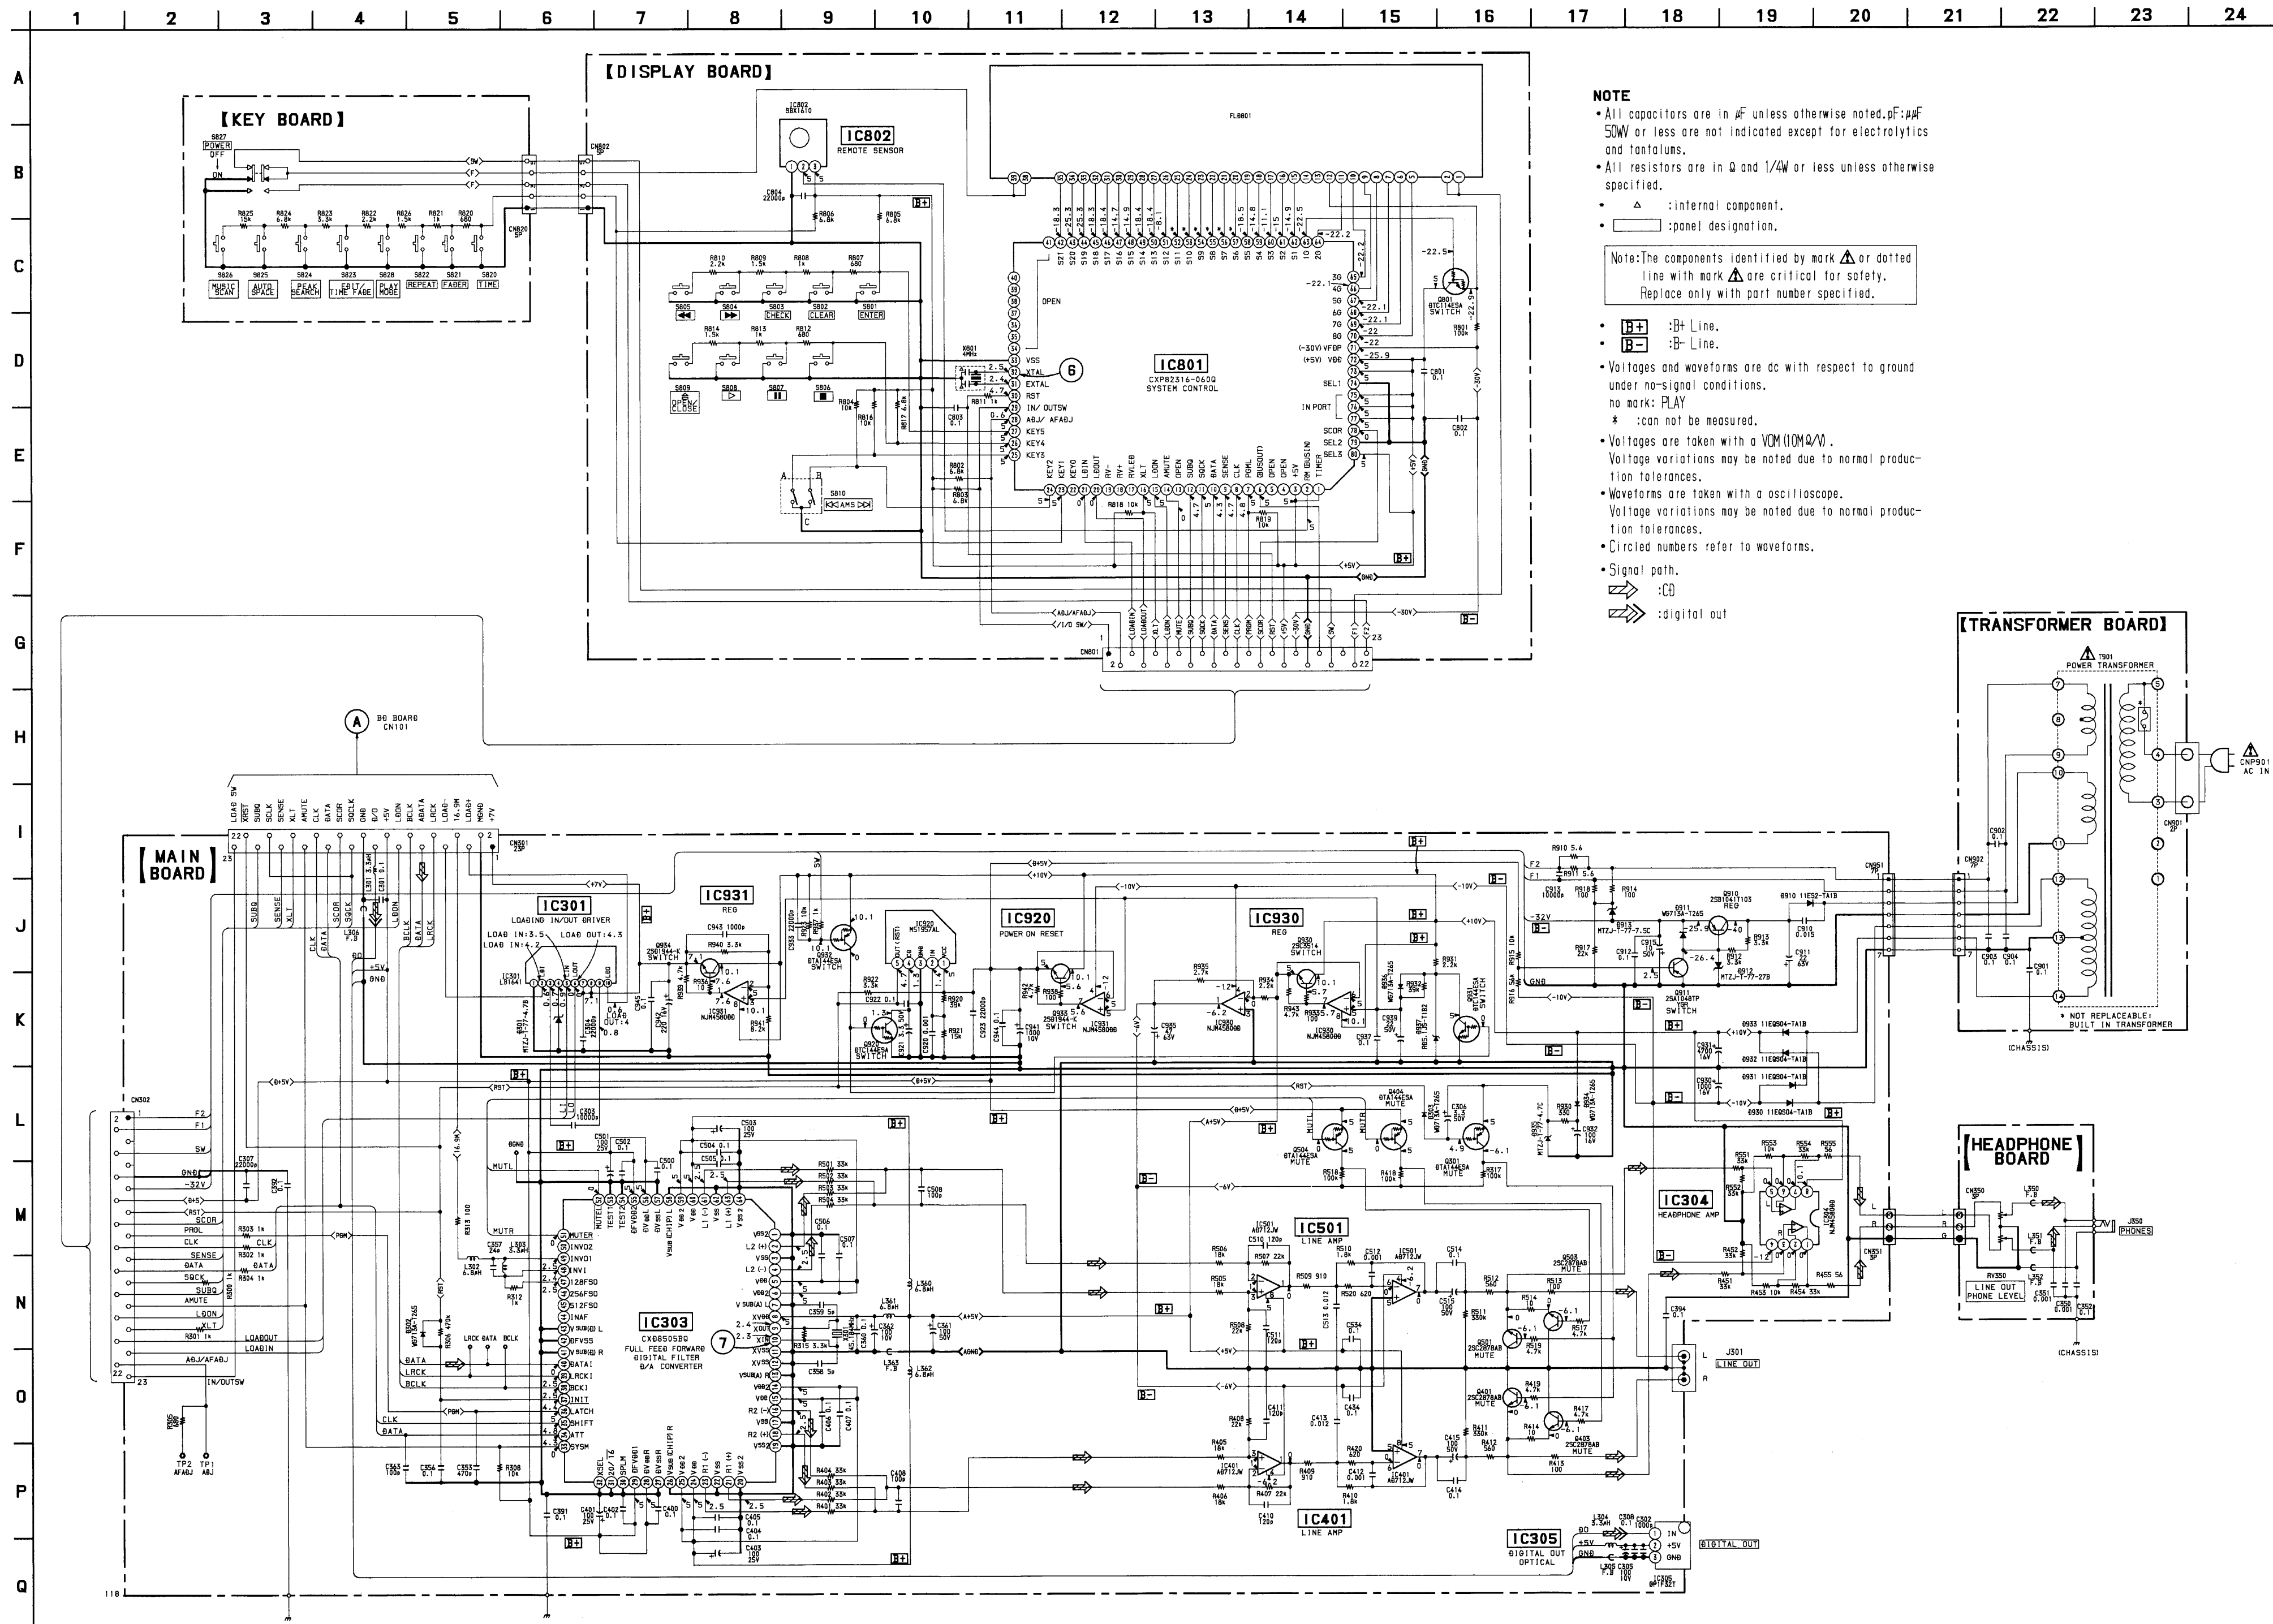


NOTE

- All capacitors are in μF unless otherwise noted. pF: μF 50W or less are not indicated except for electrolytics and tantalums.
- All resistors are in Ω and $1/4\text{W}$ or less unless otherwise specified.
- Δ : internal component.
- \square : panel designation.

Note: The components identified by mark Δ or dotted line with mark Δ are critical for safety. Replace only with part number specified.

- $B+$: B+ Line.
- $B-$: B- Line.
- Voltages and waveforms are dc with respect to ground under no-signal conditions.
- no mark: PLAY
- * : can not be measured.
- Voltages are taken with a VOM (10M Ω).
- Voltage variations may be noted due to normal production tolerances.
- Waveforms are taken with an oscilloscope.
- Voltage variations may be noted due to normal production tolerances.
- Circled numbers refer to waveforms.
- Signal path.
- \Rightarrow : CO
- \Rightarrow : digital out

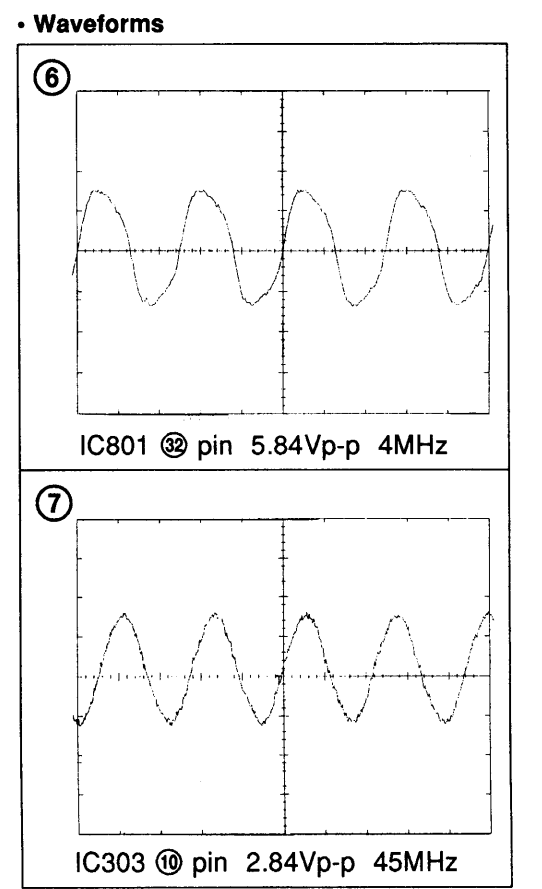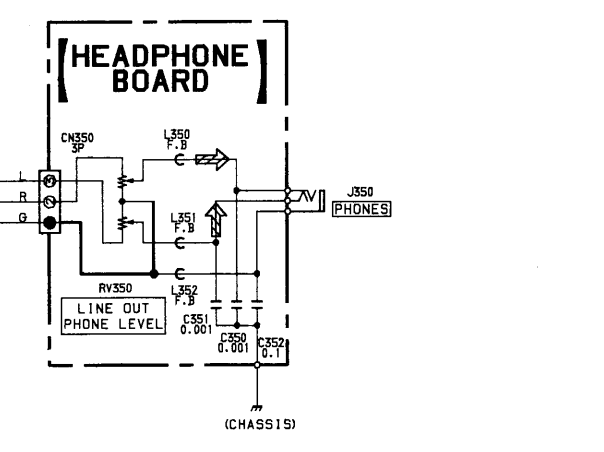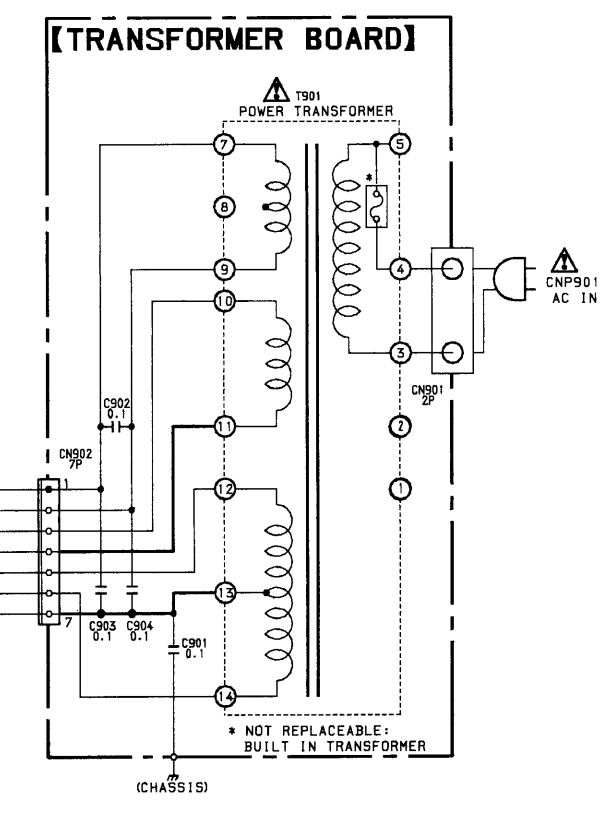


SECTION 7 EXPLODED VIEWS

NOTE:

- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- The mechanical parts with no reference number in the exploded views are not supplied.
- Hardware (# mark) list and accessories and packing materials are given in the last of this parts list.


The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

7-1. FRONT PANEL SECTION

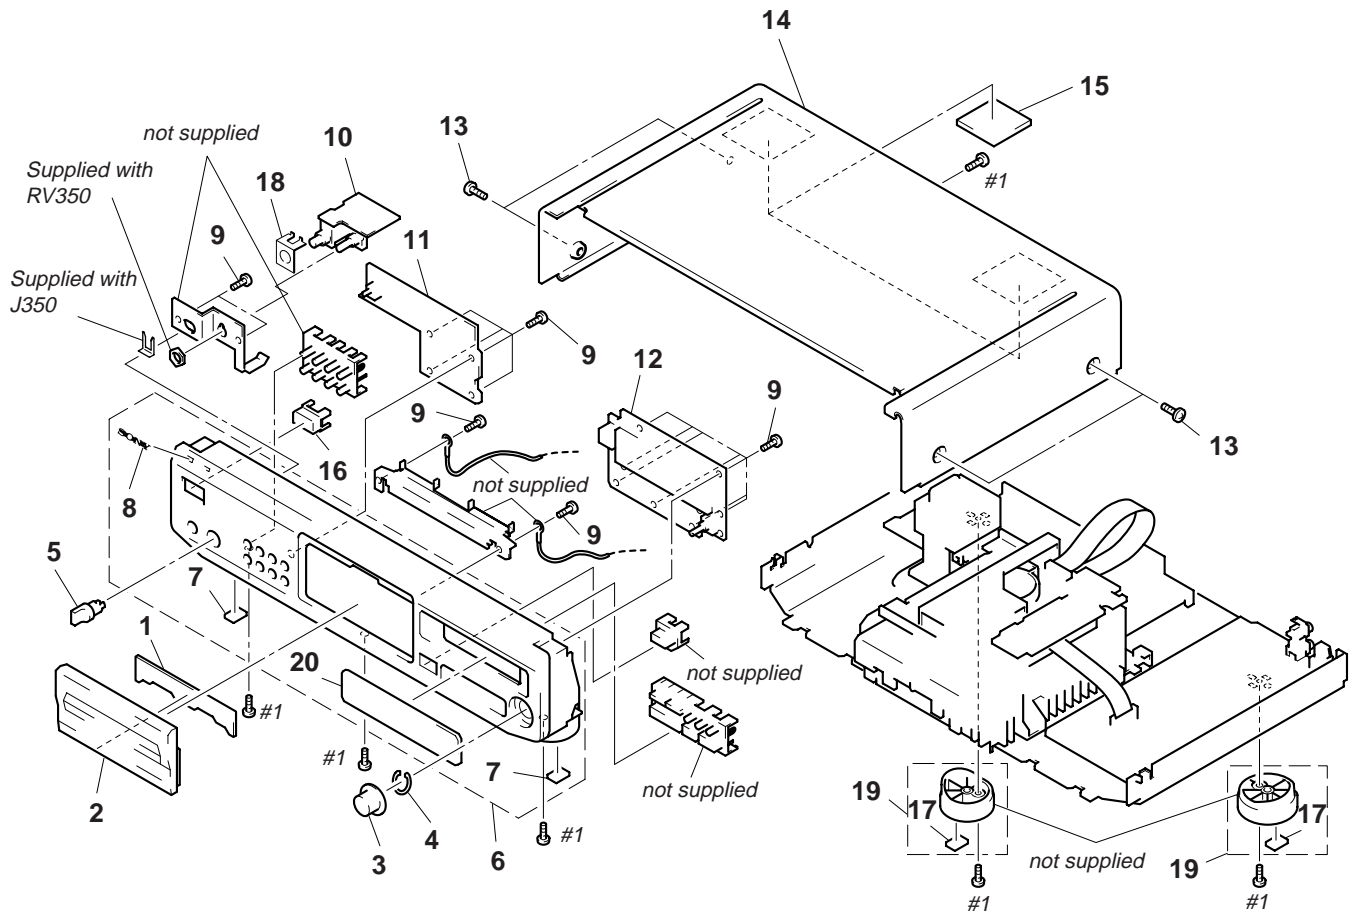


Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 1	4-980-480-01	CUSHION (LOADING)		* 11	1-658-813-11	KEY BOARD	
2	4-978-900-01	PANEL, LOADING		* 12	A-4673-819-A	DISP BOARD, COMPLETE	
3	4-977-590-21	KNOB (AMS)		13	3-363-099-01	SCREW (CASE 3 TP2)	
4	3-354-981-01	SPRING (SUS), RING		* 14	4-978-901-01	CASE (409526)	
5	4-950-189-01	KNOB (A) (VOL)		* 15	4-962-329-01	DAMPER	
6	X-4946-658-1	PANEL ASSY (ALS), FRONT		16	4-977-589-21	BUTTON (POWER)	
7	4-978-398-01	CUSHION		17	4-977-358-01	CUSHION (8X12.5)	
8	4-963-404-21	EMBLEM (5-A), SONY		* 18	4-962-201-01	PLATE (HP), GROUND	
9	4-951-620-01	SCREW (2.6X8), +BVTP		19	X-3371-435-1	FOOT ASSY (F50150S)	
* 10	1-658-815-11	HEADPHONE BOARD		20	4-978-897-01	PLATE, INDICATION	

7-2. CHASSIS SECTION

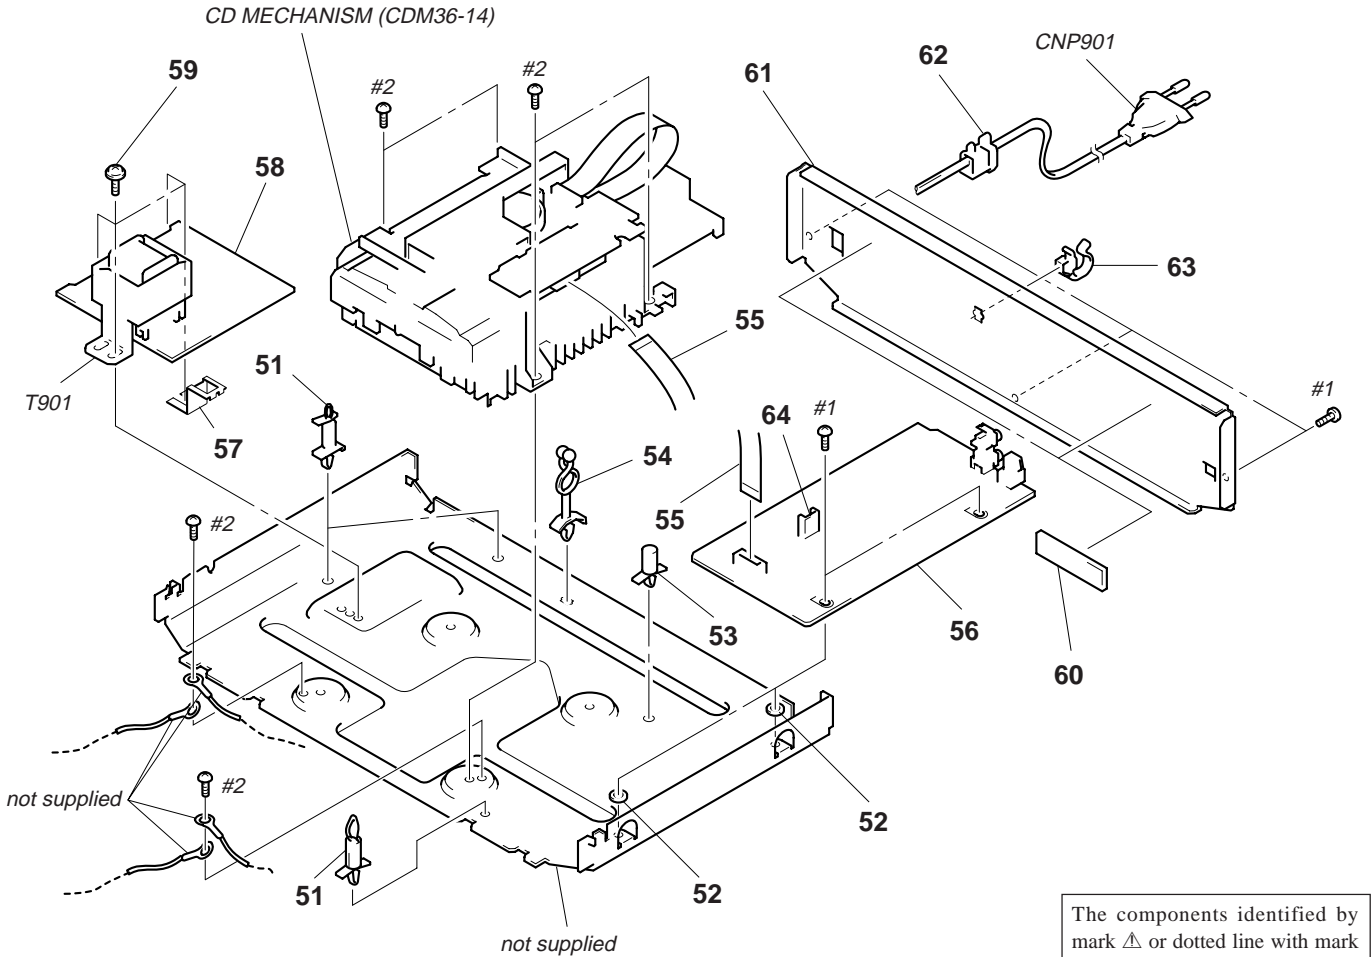

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
* 51	4-954-051-51	HOLDER, PC BOARD		60	4-959-077-01	DAMPER	
52	4-955-939-01	WASHER (CASE)		* 61	4-978-904-41	PANEL, BACK	
* 53	3-349-025-41	HOLDER, PC BOARD		62	3-703-244-00	BUSHING, CORD	
54	3-703-319-00	PURSE LOCK (DIA.15)		* 63	4-949-235-01	HOOK	
55	1-776-235-11	WIRE (FLAT TYPE) (23 CORE)		* 64	3-309-144-21	HEAT SINK	
* 56	A-4673-818-A	MAIN BOARD, COMPLETE		Δ CNP901	1-575-651-21	CORD, POWER	
* 57	4-962-200-02	PLATE (TR), GROUND		Δ T901	1-429-367-11	TRANSFORMER, POWER	
* 58	1-658-814-11	TRANSFORMER BOARD					
59	2-383-566-00	SCREW					


7-3. CD MECHANISM SECTION (CDM36-14)

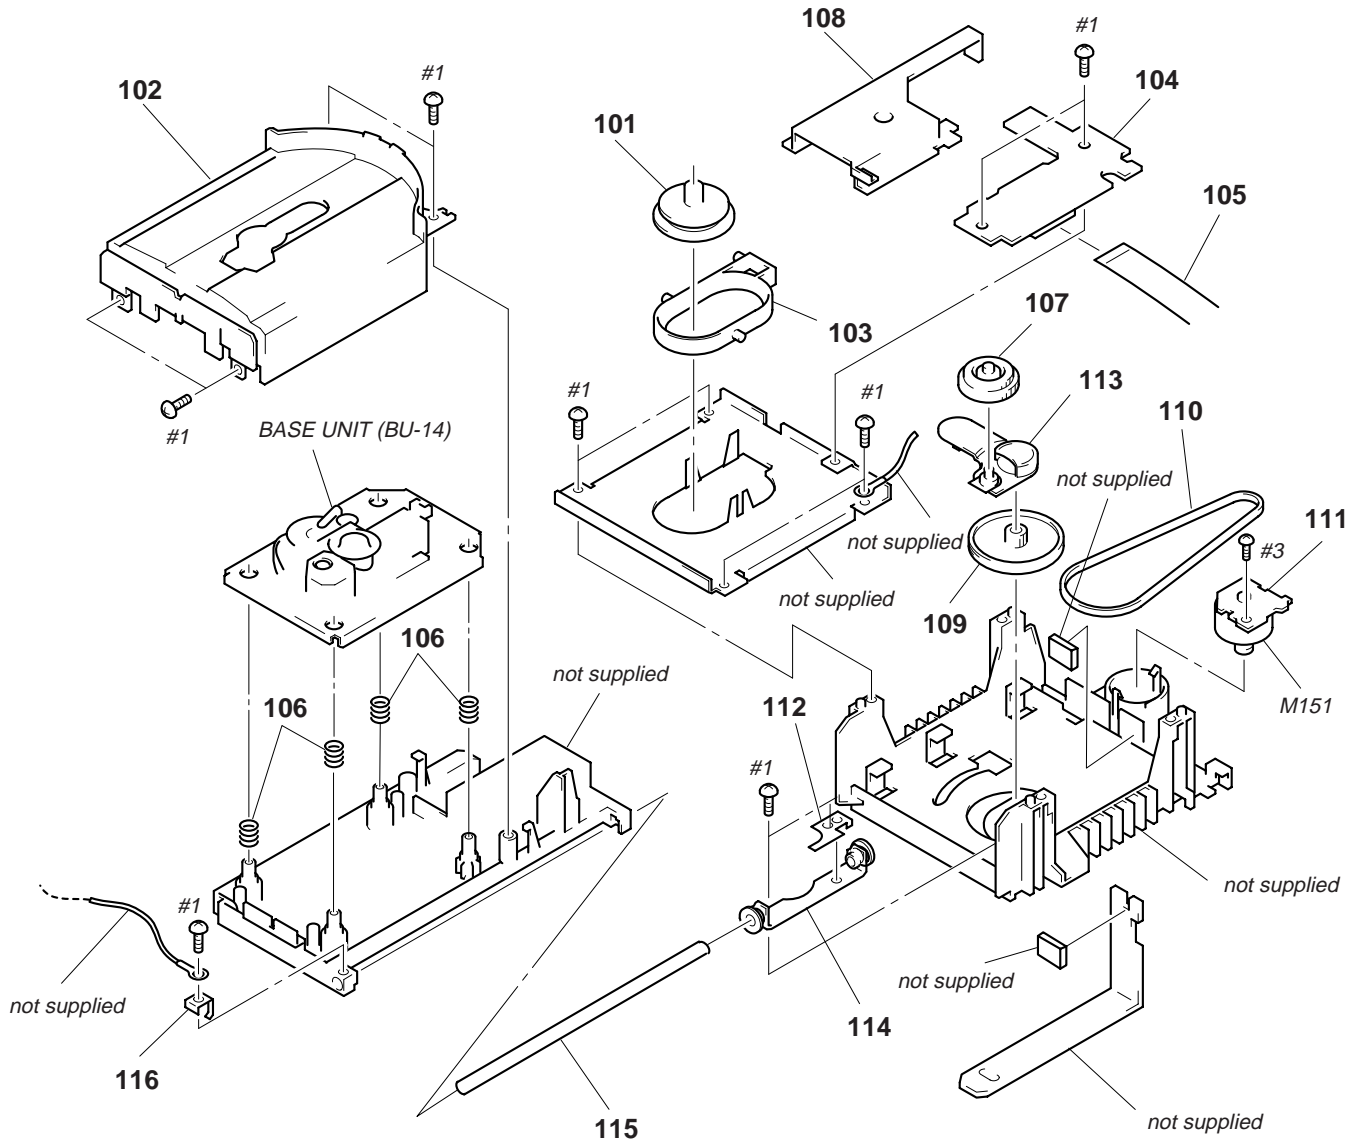

Ref. No.	Part No.	Description	Remark
101	1-452-820-11	MAGNET (ASSY)	
* 102	4-977-902-01	PANEL (DRAWER)	
* 103	4-977-894-01	HOLDER (AP)	
* 104	A-4673-722-A	BD BOARD, COMPLETE	
105	1-776-998-11	WIRE (FLAT TYPE) (21 CORE)	
106	4-948-503-01	SPRING (BU), COMPRESSION	
107	4-977-897-01	GEAR	
* 108	4-977-893-01	CAM, SLIDE	
109	4-977-896-01	PULLEY	

Ref. No.	Part No.	Description	Remark
110	4-968-905-01	BELT (CDM)	
* 111	1-658-710-11	LOADING BOARD	
* 112	4-977-891-01	PLATE, GROUND	
113	4-977-898-01	LEVER (SWING)	
* 114	4-977-892-01	BEARING	
* 115	4-977-888-01	SHAFT	
* 116	4-977-889-01	PLATE (BU), GROUND	
M151	A-4660-968-A	MOTOR ASSY (LOADING)	

7-4. BASE UNIT SECTION (BU-14)

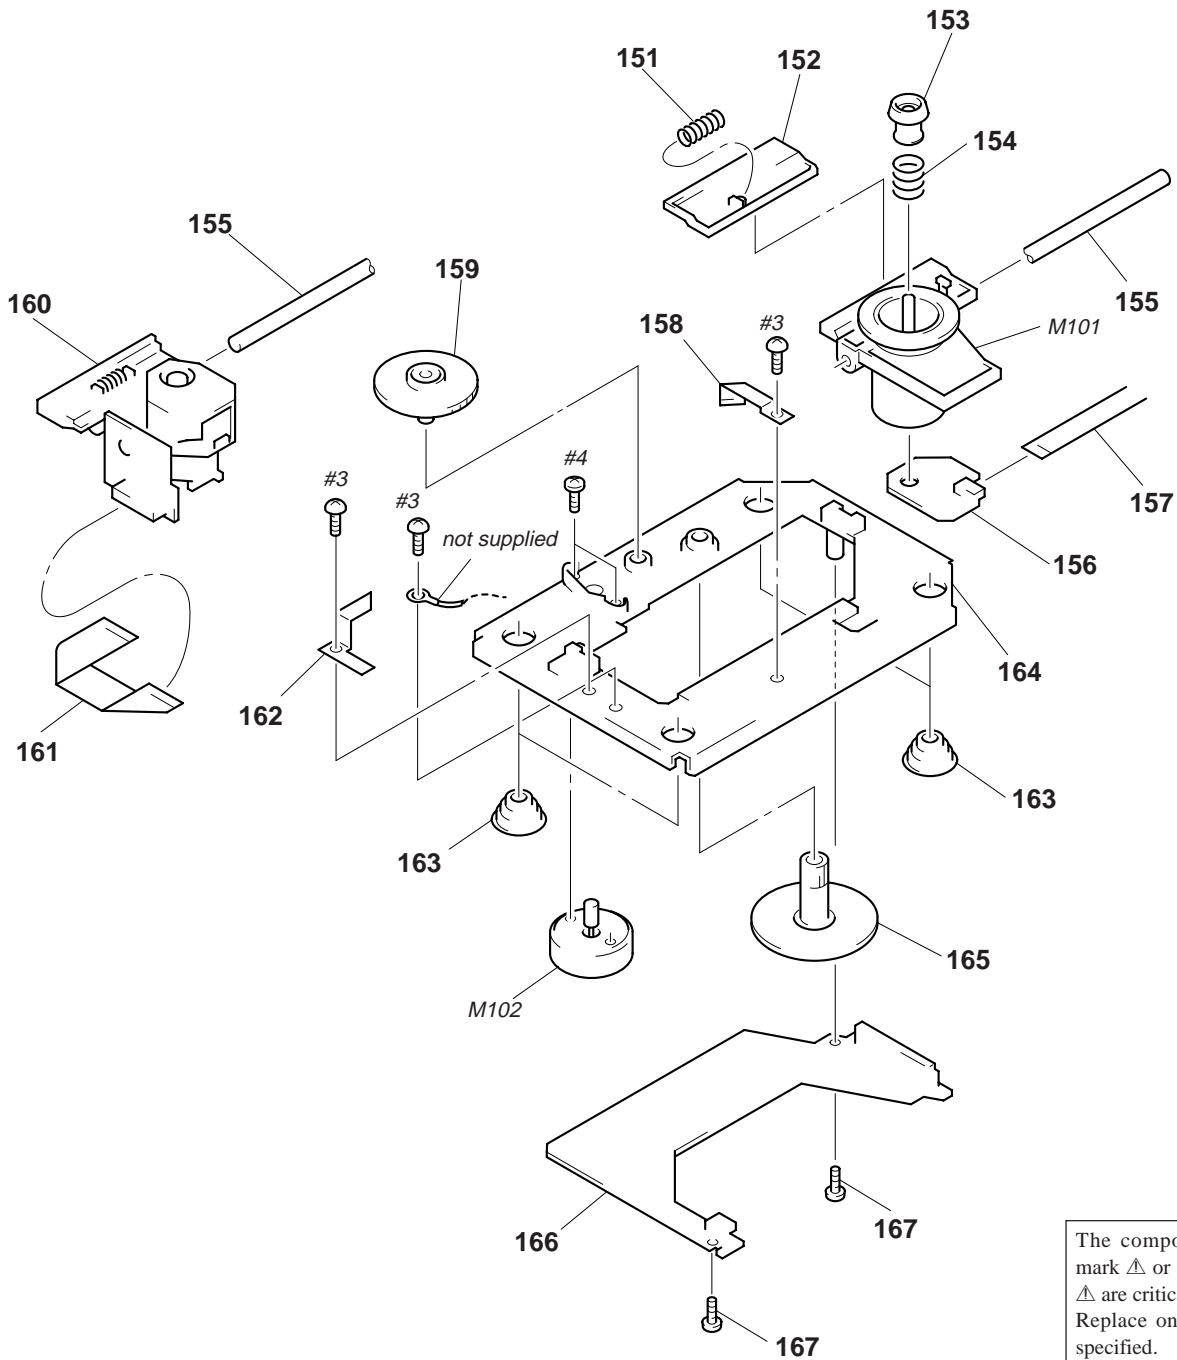

Ref. No.	Part No.	Description	Remark
151	4-977-925-01	SPRING(SLIDE BASE),COMPRESSION	
152	4-977-926-01	RACK, SLIDE	
153	4-977-915-01	CAP, CENTERING	
154	4-977-927-01	SPRING (CENTERING),COMPRESSION	
155	4-977-923-01	SHAFT, SLED	
* 156	1-658-708-11	SPINDLE BOARD	
157	1-775-990-11	WIRE (FLAT TYPE) (5 CORE)	
* 158	4-977-928-01	SPRING (SPINDLE), LEAF	
159	4-977-921-01	GEAR (B), FLAT	
Δ 160	8-848-376-01	OPTICAL PICK-UP KSS-213B/S-N	

Ref. No.	Part No.	Description	Remark
161	1-775-991-11	WIRE (FLAT TYPE) (16 CORE)	
* 162	4-977-924-01	SPRING (OP), LEAF	
163	4-951-940-01	INSULATOR (BU)	
* 164	4-977-918-01	BASE (OUTSERT)	
165	4-977-920-01	GEAR (C), FLAT	
* 166	1-658-709-11	SLED BOARD	
167	4-951-620-01	SCREW (2.6X8), +BVTP	
M101	X-4947-304-1	MOTOR ASSY (SPINDLE)	
M102	X-4947-303-1	MOTOR ASSY (SLED)	

SECTION 8 ELECTRICAL PARTS LIST

BD

Note:

The components identified by mark \triangle or dotted line with mark \triangle are critical for safety. Replace only with part number specified.

When indicating parts by reference number, please include the board name.

- Due to standardization, replacements in the parts list may be different from the parts specified in the diagrams or the components used on the set.
- -XX, -X mean standardized parts, so they may have some difference from the original one.
- Items marked “*” are not stocked since they are seldom required for routine service. Some delay should be anticipated when ordering these items.
- RESISTORS
All resistors are in ohms
METAL: Metal-film resistor
METAL OXIDE: Metal Oxide-film resistor
F : nonflammable
- SEMICONDUCTORS
In each case, u: μ , for example:
uA...: μ A..., uPA...: μ PA..., uPB...: μ PB...,
uPC...: μ PC..., uPD...: μ PD...
- CAPACITORS
uF : μ F
- COILS
uH : μ H

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
*	A-4673-722-A	BD BOARD, COMPLETE *****		C162	1-163-038-91	CERAMIC CHIP 0.1uF	25V
		< CAPACITOR >		C171	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
				C172	1-163-005-11	CERAMIC CHIP 470PF	10% 50V
				C173	1-164-232-11	CERAMIC CHIP 0.01uF	50V
						< CONNECTOR >	
C101	1-163-005-11	CERAMIC CHIP 470PF	10% 50V	CN101	1-770-072-11	CONNECTOR, FFC 23P	
C102	1-163-038-91	CERAMIC CHIP 0.1uF	25V	CN102	1-750-753-11	CONNECTOR, FFC/FPC 21P	
C103	1-163-005-11	CERAMIC CHIP 470PF	10% 50V	CN103	1-774-653-21	PIN, CONNECTOR (PC BOARD) 3P	
C105	1-135-155-21	TANTALUM CHIP 4.7uF	10% 16V			< DIODE >	
C106	1-163-038-91	CERAMIC CHIP 0.1uF	25V	D101	8-719-016-74	DIODE 1SS352	
C107	1-163-038-91	CERAMIC CHIP 0.1uF	25V			< IC >	
C108	1-163-035-00	CERAMIC CHIP 0.047uF	50V	IC101	8-752-369-78	IC CXD2545Q	
C109	1-163-145-00	CERAMIC CHIP 0.0015uF	5% 50V	IC102	8-759-071-79	IC BA6297AFP	
C110	1-163-017-00	CERAMIC CHIP 0.0047uF	5% 50V	IC103	8-752-072-45	IC CXA1821M-T6	
C111	1-163-251-11	CERAMIC CHIP 100PF	5% 50V			< COIL >	
C112	1-163-038-91	CERAMIC CHIP 0.1uF	25V	L101	1-414-234-11	INDUCTOR, FERRITE BEAD	
C113	1-163-038-91	CERAMIC CHIP 0.1uF	25V			< TRANSISTOR >	
C115	1-126-607-11	ELECT CHIP 47uF	20% 4V	Q101	8-729-010-08	TRANSISTOR MSB710-R	
C116	1-126-607-11	ELECT CHIP 47uF	20% 4V	Q102	8-729-010-08	TRANSISTOR MSB710-R	
C117	1-126-209-11	ELECT 100uF	20% 4V			< RESISTOR >	
C118	1-163-275-11	CERAMIC CHIP 0.001uF	5% 50V	R101	1-216-077-00	METAL CHIP 15K	5% 1/10W
C119	1-163-231-11	CERAMIC CHIP 15PF	5% 50V	R102	1-216-097-91	METAL GLAZE 100K	5% 1/10W
C120	1-163-251-11	CERAMIC CHIP 100PF	5% 50V	R103	1-216-077-00	METAL CHIP 15K	5% 1/10W
C123	1-164-232-11	CERAMIC CHIP 0.01uF	50V	R104	1-216-085-00	METAL CHIP 33K	5% 1/10W
C124	1-164-005-11	CERAMIC CHIP 0.47uF	25V	R105	1-216-097-91	METAL GLAZE 100K	5% 1/10W
C131	1-164-346-11	CERAMIC CHIP 1uF	16V	R106	1-216-061-00	METAL CHIP 3.3K	5% 1/10W
C132	1-164-346-11	CERAMIC CHIP 1uF	16V	R107	1-216-061-00	METAL CHIP 3.3K	5% 1/10W
C140	1-163-038-91	CERAMIC CHIP 0.1uF	25V	R108	1-216-073-00	METAL CHIP 10K	5% 1/10W
C141	1-163-038-91	CERAMIC CHIP 0.1uF	25V	R109	1-216-121-91	METAL GLAZE 1M	5% 1/10W
C151	1-163-005-11	CERAMIC CHIP 470PF	10% 50V	R110	1-216-025-91	METAL GLAZE 100	5% 1/10W
C152	1-163-005-11	CERAMIC CHIP 470PF	10% 50V	R112	1-216-049-91	METAL GLAZE 1K	5% 1/10W
C153	1-163-038-91	CERAMIC CHIP 0.1uF	25V	R113	1-216-073-00	METAL CHIP 10K	5% 1/10W
C154	1-164-336-11	CERAMIC CHIP 0.33uF	25V				
C155	1-163-005-11	CERAMIC CHIP 470PF	10% 50V				
C156	1-163-005-11	CERAMIC CHIP 470PF	10% 50V				
C157	1-163-023-00	CERAMIC CHIP 0.015uF	5% 50V				
C158	1-163-023-00	CERAMIC CHIP 0.015uF	5% 50V				
C159	1-163-019-00	CERAMIC CHIP 0.0068uF	10% 50V				
C160	1-164-161-11	CERAMIC CHIP 0.0022uF	10% 100V				
C161	1-163-038-91	CERAMIC CHIP 0.1uF	25V				

BD	DISPLAY
-----------	----------------

Ref. No.	Part No.	Description	Remark
R114	1-216-073-00	METAL CHIP 10K	5% 1/10W
R117	1-216-073-00	METAL CHIP 10K	5% 1/10W
R118	1-216-073-00	METAL CHIP 10K	5% 1/10W
R121	1-216-073-00	METAL CHIP 10K	5% 1/10W
R122	1-216-073-00	METAL CHIP 10K	5% 1/10W
R123	1-216-073-00	METAL CHIP 10K	5% 1/10W
R124	1-216-097-91	METAL GLAZE 100K	5% 1/10W
R125	1-216-049-91	METAL GLAZE 1K	5% 1/10W
R126	1-216-049-91	METAL GLAZE 1K	5% 1/10W
R127	1-216-049-91	METAL GLAZE 1K	5% 1/10W
R131	1-216-037-00	METAL CHIP 330	5% 1/10W
R133	1-216-073-00	METAL CHIP 10K	5% 1/10W
R134	1-216-073-00	METAL CHIP 10K	5% 1/10W
R135	1-216-295-91	CONDUCTOR, CHIP(2012)	
R136	1-216-295-91	CONDUCTOR, CHIP(2012)	
R137	1-216-295-91	CONDUCTOR, CHIP(2012)	
R138	1-216-295-91	CONDUCTOR, CHIP(2012)	
R140	1-216-295-91	CONDUCTOR, CHIP(2012)	
R141	1-216-089-91	METAL GLAZE 47K	5% 1/10W
R142	1-216-081-00	METAL CHIP 22K	5% 1/10W
R143	1-216-103-91	METAL GLAZE 180K	5% 1/10W
R144	1-216-103-91	METAL GLAZE 180K	5% 1/10W
R145	1-216-069-00	METAL CHIP 6.8K	5% 1/10W
R146	1-216-073-00	METAL CHIP 10K	5% 1/10W
R147	1-216-081-00	METAL CHIP 22K	5% 1/10W
R148	1-216-001-00	METAL CHIP 10	5% 1/10W
R149	1-216-003-11	METAL GLAZE 12	5% 1/10W
R151	1-216-073-00	METAL CHIP 10K	5% 1/10W
R152	1-216-073-00	METAL CHIP 10K	5% 1/10W
R153	1-216-073-00	METAL CHIP 10K	5% 1/10W
R154	1-216-073-00	METAL CHIP 10K	5% 1/10W
R155	1-216-073-00	METAL CHIP 10K	5% 1/10W
R156	1-216-073-00	METAL CHIP 10K	5% 1/10W
R157	1-216-105-91	METAL GLAZE 220K	5% 1/10W
R158	1-216-105-91	METAL GLAZE 220K	5% 1/10W
R159	1-216-101-00	METAL CHIP 150K	5% 1/10W
R160	1-216-097-91	METAL GLAZE 100K	5% 1/10W
R161	1-216-308-00	METAL CHIP 4.7	5% 1/10W
R162	1-216-113-00	METAL CHIP 470K	5% 1/10W
R163	1-216-105-91	METAL GLAZE 220K	5% 1/10W
R164	1-216-295-91	CONDUCTOR, CHIP(2012)	
R165	1-216-295-91	CONDUCTOR, CHIP(2012)	
R166	1-216-295-91	CONDUCTOR, CHIP(2012)	
R171	1-216-073-00	METAL CHIP 10K	5% 1/10W
R172	1-216-073-00	METAL CHIP 10K	5% 1/10W
R173	1-216-073-00	METAL CHIP 10K	5% 1/10W
R174	1-216-073-00	METAL CHIP 10K	5% 1/10W
R175	1-216-073-00	METAL CHIP 10K	5% 1/10W
R176	1-216-073-00	METAL CHIP 10K	5% 1/10W
R177	1-216-025-91	METAL GLAZE 100	5% 1/10W

Ref. No.	Part No.	Description	Remark
		< SWITCH >	
S152	1-762-010-11	SWITCH, LEVER (LOAD IN SW)	
S153	1-762-010-11	SWITCH, LEVER (LOAD OUT SW)	

*	A-4673-819-A	DISPLAY BOARD, COMPLETE	*****
		< CAPACITOR >	
C801	1-164-159-21	CERAMIC 0.1uF	50V
C802	1-164-159-21	CERAMIC 0.1uF	50V
C803	1-164-159-21	CERAMIC 0.1uF	50V
C804	1-161-494-00	CERAMIC 0.022uF	25V
		< CONNECTOR >	
* CN801	1-568-865-11	SOCKET, CONNECTOR 23P	
		< FLUORESCENT INDICATOR >	
FLD801	1-519-757-11	INDICATOR TUBE, FLUORESCENT	
		< IC >	
IC801	8-752-869-37	IC CXP82316-060Q	
IC802	8-741-810-59	IC SBX1810-59	
		< TRANSISTOR >	
Q801	8-729-029-67	TRANSISTOR DTC114ESA-TP	
		< RESISTOR >	
R801	1-249-441-11	CARBON 100K	5% 1/4W
R802	1-249-427-11	CARBON 6.8K	5% 1/4W
R803	1-249-427-11	CARBON 6.8K	5% 1/4W
R804	1-249-429-11	CARBON 10K	5% 1/4W
R805	1-249-427-11	CARBON 6.8K	5% 1/4W
R806	1-249-427-11	CARBON 6.8K	5% 1/4W
R807	1-249-415-11	CARBON 680	5% 1/4W
R808	1-249-417-11	CARBON 1K	5% 1/4W
R809	1-249-419-11	CARBON 1.5K	5% 1/4W
R810	1-249-421-11	CARBON 2.2K	5% 1/4W
R811	1-249-417-11	CARBON 1K	5% 1/4W
R812	1-249-415-11	CARBON 680	5% 1/4W
R813	1-249-417-11	CARBON 1K	5% 1/4W
R814	1-249-419-11	CARBON 1.5K	5% 1/4W
R816	1-249-429-11	CARBON 10K	5% 1/4W
R817	1-249-427-11	CARBON 6.8K	5% 1/4W
R818	1-249-429-11	CARBON 10K	5% 1/4W
R819	1-249-429-11	CARBON 10K	5% 1/4W
		< SWITCH >	
S801	1-554-303-21	SWITCH, TACTILE (ENTER)	
S802	1-554-303-21	SWITCH, TACTILE (CLEAR)	

DISPLAY

HEADPHONE

KEY

LOADING

MAIN

Ref. No.	Part No.	Description	Remark
S803	1-554-303-21	SWITCH, TACTILE (CHECK)	
S804	1-554-303-21	SWITCH, TACTILE (▶▶)	
S805	1-554-303-21	SWITCH, TACTILE (◀◀)	
S806	1-554-303-21	SWITCH, TACTILE (■)	
S807	1-554-303-21	SWITCH, TACTILE (▣)	
S808	1-554-303-21	SWITCH, TACTILE (▷)	
S809	1-554-303-21	SWITCH, TACTILE (⊕ OPEN/CLOSE)	
S810	1-473-452-11	ENCODER, ROTARY (◀◀ AMS ▷▷)	
		< VIBRATOR >	
X801	1-577-082-11	VIBRATOR, CERAMIC (4MHZ)	

*	1-658-815-11	HEADPHONE BOARD *****	
*	4-962-201-01	PLATE (HP), GROUND < CAPACITOR >	
C350	1-162-294-31	CERAMIC 0.001uF 10% 50V	
C351	1-162-294-31	CERAMIC 0.001uF 10% 50V	
C352	1-164-159-21	CERAMIC 0.1uF 50V	
		< JACK >	
J350	1-750-162-61	JACK (LARGE TYPE)(PHONES) < COIL >	
L350	1-412-473-41	INDUCTOR 0uH	
L351	1-412-473-41	INDUCTOR 0uH	
L352	1-412-473-41	INDUCTOR 0uH	
		< VARIABLE RESISTOR >	
RV350	1-223-926-11	RES, VAR, CARBON 1K/1K (LINE OUT PHONE LEVEL)	

*	1-658-813-11	KEY BOARD ***** < RESISTOR >	
R820	1-249-415-11	CARBON 680 5% 1/4W	
R821	1-249-417-11	CARBON 1K 5% 1/4W	
R822	1-249-421-11	CARBON 2.2K 5% 1/4W	
R823	1-249-423-11	CARBON 3.3K 5% 1/4W	
R824	1-249-427-11	CARBON 6.8K 5% 1/4W	
R825	1-249-431-11	CARBON 15K 5% 1/4W	
R826	1-249-419-11	CARBON 1.5K 5% 1/4W	
		< SWITCH >	
S820	1-554-303-21	SWITCH, TACTILE (TIME)	
S821	1-554-303-21	SWITCH, TACTILE (FADER)	

Ref. No.	Part No.	Description	Remark
S822	1-554-303-21	SWITCH, TACTILE (REPEAT)	
S823	1-554-303-21	SWITCH, TACTILE (EDIT/TIME FADE)	
S824	1-554-303-21	SWITCH, TACTILE (PEAK SEARCH)	
S825	1-554-303-21	SWITCH, TACTILE (AUTO SPACE)	
S826	1-554-303-21	SWITCH, TACTILE (MUSIC SCAN)	
S827	1-554-118-00	SWITCH, PUSH (1 KEY)(POWER)	
S828	1-554-303-21	SWITCH, TACTILE (PLAY MODE)	

*	1-658-710-11	LOADING BOARD ***** < MOTOR >	
M151	A-4660-968-A	MOTOR ASSY (LOADING)	

*	A-4673-818-A	MAIN BOARD, COMPLETE *****	
	1-537-770-21	TERMINAL BOARD, GROUND	
*	3-309-144-21	HEAT SINK	
	7-685-871-01	SCREW +BVTT 3X6 (S) < CAPACITOR >	
C301	1-164-159-21	CERAMIC 0.1uF 50V	
C302	1-162-294-31	CERAMIC 0.001uF 10% 50V	
C303	1-162-306-11	CERAMIC 0.01uF 30% 16V	
C304	1-161-494-00	CERAMIC 0.022uF 25V	
C305	1-124-443-00	ELECT 100uF 20% 10V	
C306	1-126-962-11	ELECT 3.3uF 20% 50V	
C307	1-161-494-00	CERAMIC 0.022uF 25V	
C308	1-164-159-21	CERAMIC 0.1uF 50V	
C353	1-162-290-31	CERAMIC 470PF 10% 50V	
C356	1-164-159-21	CERAMIC 0.1uF 50V	
C357	1-162-208-31	CERAMIC 24PF 5% 50V	
C358	1-102-942-00	CERAMIC 5.0PF ±0.5PF 50V	
C359	1-102-942-00	CERAMIC 5.0PF ±0.5PF 50V	
C360	1-136-850-11	FILM 0.1uF 5% 63V	
C361	1-126-063-11	ELECT 100uF 20% 50V	
C362	1-124-994-11	ELECT 100uF 20% 10V	
C363	1-162-282-31	CERAMIC 100PF 10% 50V	
C391	1-164-159-21	CERAMIC 0.1uF 50V	
C392	1-164-159-21	CERAMIC 0.1uF 50V	
C394	1-164-159-21	CERAMIC 0.1uF 50V	
C400	1-164-159-21	CERAMIC 0.1uF 50V	
C401	1-124-122-11	ELECT 100uF 20% 50V	
C402	1-164-159-21	CERAMIC 0.1uF 50V	
C403	1-124-122-11	ELECT 100uF 20% 50V	
C404	1-136-850-11	FILM 0.1uF 5% 63V	
C405	1-136-850-11	FILM 0.1uF 5% 63V	
C406	1-136-850-11	FILM 0.1uF 5% 63V	
C407	1-136-850-11	FILM 0.1uF 5% 63V	

MAIN

Ref. No.	Part No.	Description	Remark
C408	1-136-808-11	FILM	100PF 5% 100V
C410	1-102-816-00	CERAMIC	120PF 5% 50V
C411	1-102-816-00	CERAMIC	120PF 5% 50V
C412	1-106-343-00	MYLAR	1000PF 5% 200V
C413	1-130-484-00	MYLAR	0.012uF 5% 50V
C414	1-136-850-11	FILM	0.1uF 5% 63V
C415	1-126-063-11	ELECT	100uF 20% 50V
C434	1-136-850-11	FILM	0.1uF 5% 63V
C500	1-164-159-21	CERAMIC	0.1uF 50V
C501	1-124-122-11	ELECT	100uF 20% 50V
C502	1-164-159-21	CERAMIC	0.1uF 50V
C503	1-124-122-11	ELECT	100uF 20% 50V
C504	1-136-850-11	FILM	0.1uF 5% 63V
C505	1-136-850-11	FILM	0.1uF 5% 63V
C506	1-136-850-11	FILM	0.1uF 5% 63V
C507	1-136-850-11	FILM	0.1uF 5% 63V
C508	1-136-808-11	FILM	100PF 5% 100V
C510	1-102-816-00	CERAMIC	120PF 5% 50V
C511	1-102-816-00	CERAMIC	120PF 5% 50V
C512	1-106-343-00	MYLAR	1000PF 5% 200V
C513	1-130-484-00	MYLAR	0.012uF 5% 50V
C514	1-136-850-11	FILM	0.1uF 5% 63V
C515	1-126-063-11	ELECT	100uF 20% 50V
C534	1-136-850-11	FILM	0.1uF 5% 63V
C910	1-136-802-11	FILM	0.015uF 5% 100V
C911	1-124-929-11	ELECT	22uF 20% 100V
C912	1-136-850-11	FILM	0.1uF 5% 63V
C913	1-162-306-11	CERAMIC	0.01uF 30% 16V
C915	1-124-907-11	ELECT	10uF 20% 50V
C920	1-162-294-31	CERAMIC	0.001uF 10% 50V
C921	1-126-962-11	ELECT	3.3uF 20% 50V
C922	1-164-159-21	CERAMIC	0.1uF 50V
C923	1-161-494-00	CERAMIC	0.022uF 25V
C930	1-124-360-00	ELECT	1000uF 20% 16V
C931	1-124-523-11	ELECT	4700uF 20% 16V
C932	1-104-665-11	ELECT	100uF 20% 16V
C933	1-161-494-00	CERAMIC	0.022uF 25V
C935	1-128-200-11	ELECT	47uF 20% 63V
C937	1-136-850-11	FILM	0.1uF 5% 63V
C939	1-124-916-11	ELECT	22uF 20% 63V
C941	1-124-473-11	ELECT	1000uF 20% 10V
C942	1-124-120-11	ELECT	220uF 20% 25V
C943	1-162-294-31	CERAMIC	0.001uF 10% 50V
C944	1-136-850-11	FILM	0.1uF 5% 63V
C945	1-136-850-11	FILM	0.1uF 5% 63V
< CONNECTOR >			
CN301	1-750-428-11	CONNECTOR, FFC/FPC 23P	
CN302	1-750-428-11	CONNECTOR, FFC/FPC 23P	
CN351	1-506-468-11	PIN, CONNECTOR 3P	
CN951	1-766-269-11	PIN, CONNECTOR (PC BOARD) 7P	

Ref. No.	Part No.	Description	Remark
< DIODE >			
D301	8-719-010-34	DIODE UZ-4.7BSC	
D302	8-719-911-19	DIODE 1SS119	
D303	8-719-911-19	DIODE 1SS119	
D910	8-719-200-82	DIODE 11ES2	
D911	8-719-911-19	DIODE 1SS119	
D912	8-719-982-15	DIODE MTZJ-27B	
D913	8-719-110-03	DIODE RD7.5ESB2	
D930	8-719-210-21	DIODE 11EQS04	
D931	8-719-210-21	DIODE 11EQS04	
D932	8-719-210-21	DIODE 11EQS04	
D933	8-719-210-21	DIODE 11EQS04	
D934	8-719-911-19	DIODE 1SS119	
D935	8-719-921-40	DIODE MTZJ-4.7C	
D936	8-719-911-19	DIODE 1SS119	
D937	8-719-115-38	DIODE RD5.1JS-T1B2	
< IC >			
IC301	8-759-822-09	IC LB1641	
IC303	8-759-370-62	IC CXD8505BQ	
IC304	8-759-710-59	IC NJM4580D-D	
IC305	8-749-921-12	IC GP1F32T (DIGITAL OUT)	
IC401	8-759-971-80	IC AD712JN	
IC501	8-759-971-80	IC AD712JN	
IC920	8-759-636-16	IC M51957AL	
IC930	8-759-710-59	IC NJM4580D-D	
IC931	8-759-710-59	IC NJM4580D-D	
< JACK >			
J301	1-774-727-11	JACK, PIN 2P (LINE OUT)	
< COIL >			
L301	1-410-322-11	INDUCTOR 3.3uH	
L302	1-410-507-11	INDUCTOR 6.8uH	
L303	1-410-503-11	INDUCTOR 3.3uH	
L304	1-410-322-11	INDUCTOR 3.3uH	
L305	1-412-473-41	INDUCTOR 0uH	
L306	1-412-473-41	INDUCTOR 0uH	
L360	1-410-507-11	INDUCTOR 6.8uH	
L361	1-410-507-11	INDUCTOR 6.8uH	
L362	1-410-507-11	INDUCTOR 6.8uH	
L363	1-412-473-41	INDUCTOR 0uH	
< TRANSISTOR >			
Q301	8-729-029-56	TRANSISTOR DTA144ESA-TP	
Q401	8-729-231-55	TRANSISTOR 2SC2878-AB	
Q403	8-729-231-55	TRANSISTOR 2SC2878-AB	
Q404	8-729-029-56	TRANSISTOR DTA144ESA-TP	
Q501	8-729-231-55	TRANSISTOR 2SC2878-AB	
Q503	8-729-231-55	TRANSISTOR 2SC2878-AB	
Q504	8-729-029-56	TRANSISTOR DTA144ESA-TP	
Q910	8-729-019-64	TRANSISTOR 2SB1041	

Ref. No.	Part No.	Description	Remark	Ref. No.	Part No.	Description	Remark
Q911	8-729-119-76	TRANSISTOR 2SA1175-HFE		R509	1-247-830-11	CARBON 910 5%	1/4W
Q920	8-729-030-03	TRANSISTOR DTC144ESA-TP		R510	1-249-420-11	CARBON 1.8K 5%	1/4W
Q930	8-729-104-18	TRANSISTOR 2SC3514-Q		R511	1-247-891-00	CARBON 330K 5%	1/4W
Q931	8-729-030-03	TRANSISTOR DTC144ESA-TP		R512	1-249-414-11	CARBON 560 5%	1/4W
Q932	8-729-029-56	TRANSISTOR DTA144ESA-TP		R513	1-247-807-31	CARBON 100 5%	1/4W
Q933	8-729-021-82	TRANSISTOR 2SD2396K		R514	1-249-393-11	CARBON 10 5%	1/4W
Q934	8-729-021-82	TRANSISTOR 2SD2396K		R517	1-249-425-11	CARBON 4.7K 5%	1/4W
< RESISTOR >				R518	1-249-441-11	CARBON 100K 5%	1/4W
R300	1-249-417-11	CARBON 1K 5%	1/4W	R519	1-249-425-11	CARBON 4.7K 5%	1/4W
R301	1-249-417-11	CARBON 1K 5%	1/4W	R520	1-247-826-00	CARBON 620 5%	1/4W
R302	1-249-417-11	CARBON 1K 5%	1/4W	R551	1-249-435-11	CARBON 33K 5%	1/4W
R303	1-249-417-11	CARBON 1K 5%	1/4W	R552	1-249-435-11	CARBON 33K 5%	1/4W
R304	1-249-417-11	CARBON 1K 5%	1/4W	R553	1-249-429-11	CARBON 10K 5%	1/4W
R305	1-249-415-11	CARBON 680 5%	1/4W	R554	1-249-435-11	CARBON 33K 5%	1/4W
R306	1-247-895-91	CARBON 470K 5%	1/4W	R555	1-249-402-11	CARBON 56 5%	1/4W
R308	1-249-429-11	CARBON 10K 5%	1/4W	R910	1-249-390-11	CARBON 5.6 5%	1/4W
R312	1-249-417-11	CARBON 1K 5%	1/4W	R911	1-249-390-11	CARBON 5.6 5%	1/4W
R313	1-247-807-31	CARBON 100 5%	1/4W	R912	1-249-423-11	CARBON 3.3K 5%	1/4W
R315	1-249-423-11	CARBON 3.3K 5%	1/4W	R913	1-249-423-11	CARBON 3.3K 5%	1/4W
R317	1-249-441-11	CARBON 100K 5%	1/4W	R914	1-247-807-31	CARBON 100 5%	1/4W
R401	1-249-435-11	CARBON 33K 5%	1/4W	R915	1-249-429-11	CARBON 10K 5%	1/4W
R402	1-249-435-11	CARBON 33K 5%	1/4W	R916	1-249-438-11	CARBON 56K 5%	1/4W
R403	1-249-435-11	CARBON 33K 5%	1/4W	R917	1-247-863-91	CARBON 22K 5%	1/4W
R404	1-249-435-11	CARBON 33K 5%	1/4W	R918	1-247-807-31	CARBON 100 5%	1/4W
R405	1-249-432-11	CARBON 18K 5%	1/4W	R920	1-249-436-11	CARBON 39K 5%	1/4W
R406	1-249-432-11	CARBON 18K 5%	1/4W	R921	1-249-431-11	CARBON 15K 5%	1/4W
R407	1-247-863-91	CARBON 22K 5%	1/4W	R922	1-249-423-11	CARBON 3.3K 5%	1/4W
R408	1-247-863-91	CARBON 22K 5%	1/4W	R923	1-249-429-11	CARBON 10K 5%	1/4W
R409	1-247-830-11	CARBON 910 5%	1/4W	R930	1-249-411-11	CARBON 330 5%	1/4W
R410	1-249-420-11	CARBON 1.8K 5%	1/4W	R931	1-249-421-11	CARBON 2.2K 5%	1/4W
R411	1-247-891-00	CARBON 330K 5%	1/4W	R932	1-249-436-11	CARBON 39K 5%	1/4W
R412	1-249-414-11	CARBON 560 5%	1/4W	R933	1-247-807-31	CARBON 100 5%	1/4W
R413	1-247-807-31	CARBON 100 5%	1/4W	R934	1-249-421-11	CARBON 2.2K 5%	1/4W
R414	1-249-393-11	CARBON 10 5%	1/4W	R935	1-249-422-11	CARBON 2.7K 5%	1/4W
R417	1-249-425-11	CARBON 4.7K 5%	1/4W	R936	1-249-393-11	CARBON 10 5%	1/4W
R418	1-249-441-11	CARBON 100K 5%	1/4W	R937	1-249-417-11	CARBON 1K 5%	1/4W
R419	1-249-425-11	CARBON 4.7K 5%	1/4W	R938	1-247-807-31	CARBON 100 5%	1/4W
R420	1-247-826-00	CARBON 620 5%	1/4W	R939	1-249-425-11	CARBON 4.7K 5%	1/4W
R451	1-249-435-11	CARBON 33K 5%	1/4W	R940	1-249-423-11	CARBON 3.3K 5%	1/4W
R452	1-249-435-11	CARBON 33K 5%	1/4W	R941	1-249-428-11	CARBON 8.2K 5%	1/4W
R453	1-249-429-11	CARBON 10K 5%	1/4W	R942	1-249-425-11	CARBON 4.7K 5%	1/4W
R454	1-249-435-11	CARBON 33K 5%	1/4W	R943	1-249-425-11	CARBON 4.7K 5%	1/4W
R455	1-249-402-11	CARBON 56 5%	1/4W	< VIBRATOR >			
R501	1-249-435-11	CARBON 33K 5%	1/4W	X301	1-760-955-11	VIBRATOR, CRYSTAL (45.184MHZ)	
R502	1-249-435-11	CARBON 33K 5%	1/4W	*****			
R503	1-249-435-11	CARBON 33K 5%	1/4W				
R504	1-249-435-11	CARBON 33K 5%	1/4W				
R505	1-249-432-11	CARBON 18K 5%	1/4W				
R506	1-249-432-11	CARBON 18K 5%	1/4W				
R507	1-247-863-91	CARBON 22K 5%	1/4W				
R508	1-247-863-91	CARBON 22K 5%	1/4W				

CDP-XE800

SLED	SPINDLE	TRANSFORMER
-------------	----------------	--------------------

Ref. No.	Part No.	Description	Remark
*	1-658-709-11	SLED BOARD *****	
		< CONNECTOR >	
CN104	1-774-380-11	CONNECTOR, FFC/FPC 16P	
CN105	1-568-838-11	SOCKET, CONNECTOR 21P	
* CN106	1-750-737-11	CONNECTOR, FFC/FPC 5P	
		< MOTOR >	
M102	X-4947-303-1	MOTOR ASSY (SLED)	

*	1-658-708-11	SPINDLE BOARD *****	
		< CONNECTOR >	
* CN107	1-568-848-11	SOCKET, CONNECTOR 5P	
		< MOTOR >	
M101	X-4947-304-1	MOTOR ASSY (SPINDLE)	
		< SWITCH >	
S151	1-571-958-11	SWITCH, PUSH (1 KEY)(LIMIT SW)	

*	1-658-814-11	TRANSFORMER BOARD *****	
*	4-962-200-02	PLATE (TR), GROUND	
		< CAPACITOR >	
C901	1-164-159-21	CERAMIC 0.1uF	50V
C902	1-164-159-21	CERAMIC 0.1uF	50V
C903	1-164-159-21	CERAMIC 0.1uF	50V
C904	1-164-159-21	CERAMIC 0.1uF	50V
		< CONNECTOR >	
CN901	1-580-230-11	PIN, CONNECTOR (PC BOARD) 2P	
		< TRANSFORMER >	
△ T901	1-429-367-11	TRANSFORMER, POWER	

Ref. No.	Part No.	Description	Remark
		MISCELLANEOUS *****	
55	1-776-235-11	WIRE (FLAT TYPE) (23 CORE)	
101	1-452-820-11	MAGNET (ASSY)	
105	1-776-998-11	WIRE (FLAT TYPE) (21 CORE)	
157	1-775-990-11	WIRE (FLAT TYPE) (5 CORE)	
△ 160	8-848-376-01	OPTICAL PICK-UP KSS-213B/S-N	
161	1-775-991-11	WIRE (FLAT TYPE) (16 CORE)	
M101	X-4947-304-1	MOTOR ASSY (SPINDLE)	
M102	X-4947-303-1	MOTOR ASSY (SLED)	
M151	A-4660-968-A	MOTOR ASSY (LOADING)	
△ CNP901	1-575-651-21	CORD, POWER	
△ T901	1-429-367-11	TRANSFORMER, POWER	

		ACCESSORIES & PACKING MATERIALS *****	
	1-473-125-11	REMOTE COMMANDER (RM-D820)	
	1-590-925-31	CORD, CONNECTION (AUDIO 100cm)	
	3-810-116-11	MANUAL, INSTRUCTION (ENGLISH,FRENCH,SPANISH,SWEDISH)(AEP)	
	3-810-116-21	MANUAL, INSTRUCTION (GERMAN,DUTCH,ITALIAN,PORTUGUESE)(AEP)	
	3-810-116-31	MANUAL, INSTRUCTION (GERMAN)(G)	
*	3-948-574-01	SHEET (ROLL), PROTECTION	
*	4-962-615-01	COVER, BATTERY (for RM-D820)	
*	4-979-127-21	INDIVIDUAL CARTON	
*	4-982-101-01	CUSHION	

		***** HARDWARE LIST *****	
#1	7-685-646-79	SCREW +BVTP 3X8 TYPE2 N-S	
#2	7-685-871-01	SCREW +BVTT 3X6 (S)	
#3	7-682-548-04	SCREW +BVTT 3X8 (S)	
#4	7-627-852-07	SCREW, PRECISION +P 1.7X2.5	

The components identified by mark △ or dotted line with mark △ are critical for safety. Replace only with part number specified.